



1 HANDLEBAR

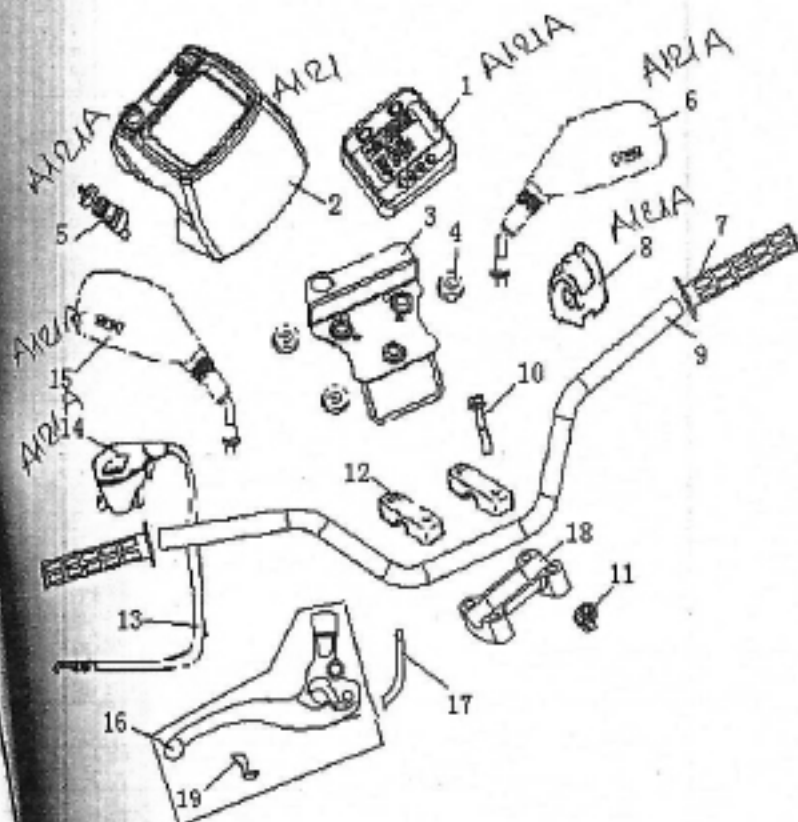


REF. No.	PART No.	DESCRIPTION	Q'TY	名称
1	51.01.0012	SPEEDOMETER A121A	1	仪表显示器
2	62.01.0010	INSTRUMENT HOUSING	1	仪表装饰罩 A121
3	14.01.0010	WARNING LIGHT BRACKET	1	仪表安装板
4	62.01.0020	RUBBER BUSH	3	橡胶套 A
5	53.01.0010	IGNITION SWITCH WITH KEY	1	电门锁 A121A
6	63.01.0010	REAR VIEW MIRROR LEFT	1	左后视镜 A121A
7	44.01.0010	GRIP	2	握把
8	53.01.0021	SWITCH ASSY	1	左把手开关 A121A
9	44.01.0020	HANDLEBAR	1	方向把
10	001.00130	BOLT M8X60	4	螺栓 M8x60
11	003.00130	NUT M8	4	螺母 M8
12	44.01.0030	HANDLEBAR CLAMP TOP	2	方向把上压块
13	45.01.0010	THROTTLE CABLE	1	油门钢索组件
14	44.01.0041	THROTTLE CONTROL	1	油门固定座组件 A121A
15	63.01.0020	REAR VIEW MIRROR RIGHT	1	右后视镜 A121A
16	43.01.0010	PARKING HANDLE	1	驻车把手
17	45.01.0021	PARKING LINE	1	驻车钢索组件
18	44.01.0050	HANDLEBAR CLAMP BOTTOM	1	方向把下压块
19	43.01.1010	LOCALIZER	1	定位器

2 FUEL TANK

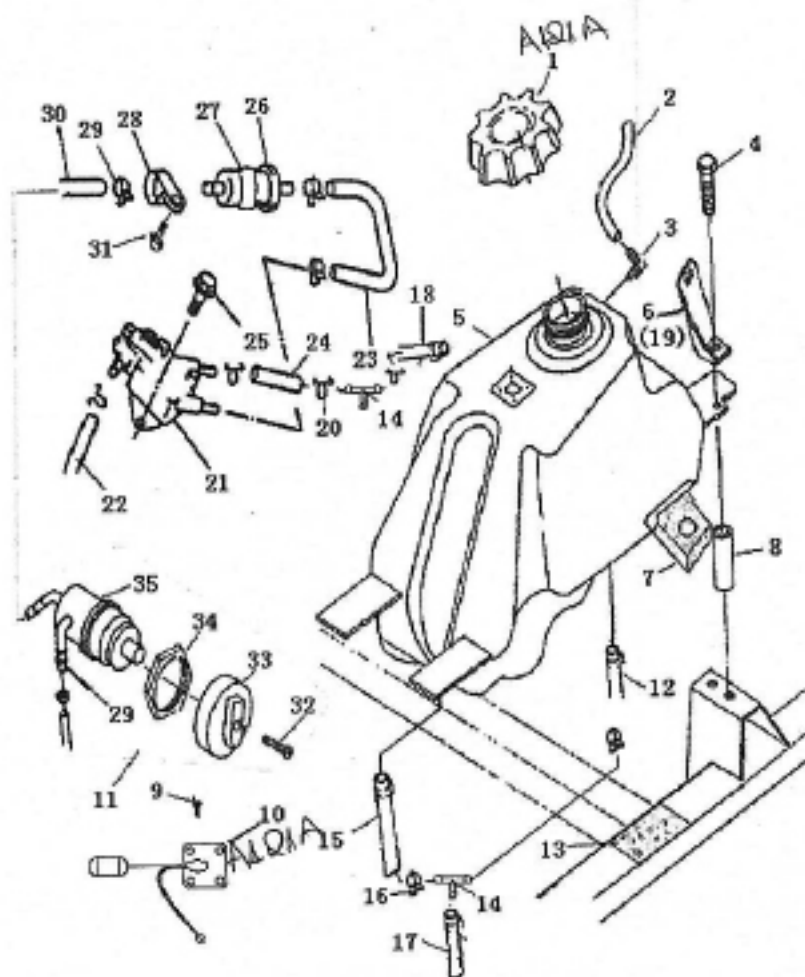


REF No	PART NO	DESCRIPTION	Q'TY	名称
1	2.9.01.0010	FUEL CAP A1Q1A	1	油箱盖
2	2.9.01.0020	VENT TUBE	1	油箱通气管
3	2.9.01.0030	VENT FITTING	1	通气嘴
4	0.01.00230	BOLT M6X60	2	螺栓 M6X60
5	2.9.01.2001	FUEL TANK	1	油箱(新状态)
6	2.9.01.0050	MOUNTING BRACKET LEFT	1	左油箱压板
7	2.9.01.0070	FOAM PAD	1	油箱安装缓冲垫
8	2.9.01.0080	SPACER	2	油箱安装衬套
9	0.02.03150	BOL	4	十字槽盘头螺钉 M6x10
10	2.9.01.0020 A1Q1A	OIL SENSOR A1Q1A	1	油位传感器
11	2.9.01.1101	FUEL VALVE ASSY	1	油箱开关
12	2.9.01.0220	FUEL HOSE	1	进油管III
13	2.9.01.0090	MOUNTING PAD	2	油箱缓冲海绵垫 50X22X5
14	2.9.01.0230	BRAKE LINE COUPLER	2	油箱三通
15	2.9.01.0100	FUEL HOSE	1	进油管IV
16	6.4.01.0060	CLIP 11.3	5	卡箍 11.3
17	2.9.01.0240	FUEL HOSE	1	进油管II
18	2.9.01.0250	PIPE II	1	负压管II
19	2.9.01.0160	MOUNTING BRACKET RIGHT	1	右油箱压板
20	6.4.01.0040	CLIP 10	5	卡箍 10
21	2.9.01.0200	FUEL PUMP ASSY	1	汽油泵
22	2.9.01.0210	FUEL LINE I	1	出油管I

3 REAR FENDERS

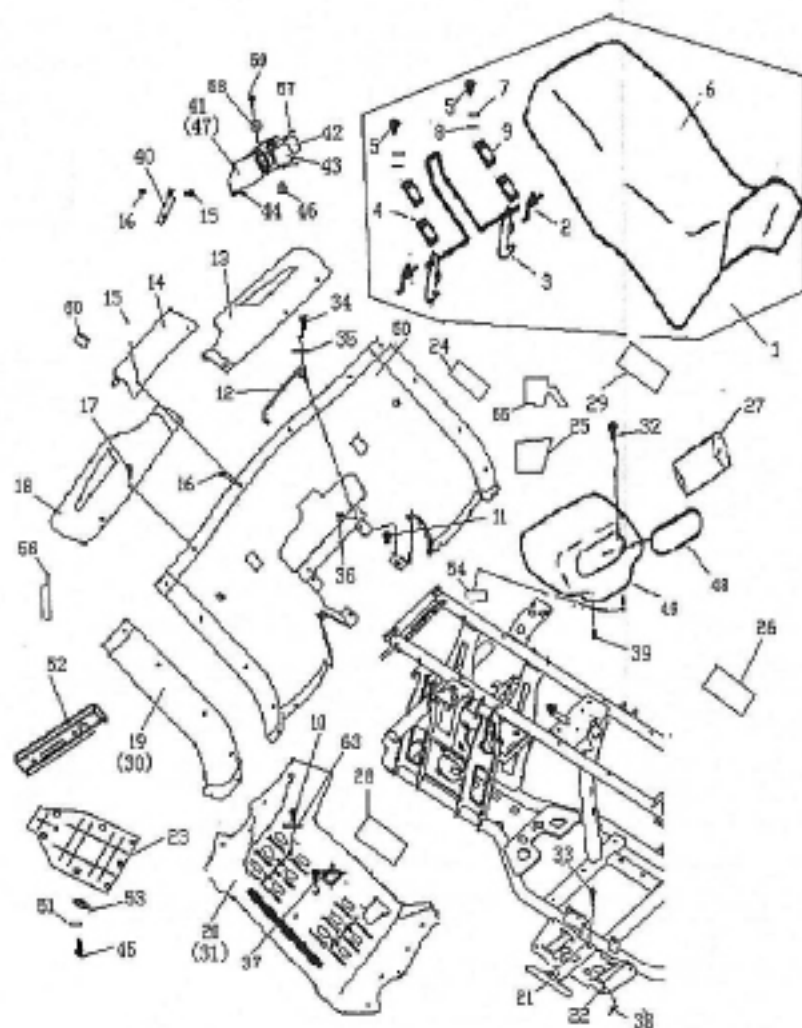


REF. No.	PART No.	DESCRIPTION	Q'TY	名称
1	6.1.01.0000	SEAT ASSY	1	坐垫总成
2	6.1.01.0020	SPRING	2	扭簧
3	6.1.01.0030	LATCH ASSEMBLY	1	座垫锁钩
4	6.1.01.0040	RETAINER CLIP	2	压板
5	0.01.00430	BOLT M6X15	2	螺栓 M6X15
6	6.1.01.0010	SEAT	2	座垫
7	0.04.00610	WASHER 6	2	弹垫 6
8	0.04.00110	WASHER 6	2	垫片 6
9	6.4.01.0110	FICHE	2	卡片
10	0.01.00530	BOLT M6X30	4	螺栓 M6X30
11	0.01.00330	BOLT M6X12	4	螺栓 M6X12
12	6.2.01.0250	LATCH BRACKET	1	座垫锁杆
13	6.2.01.0060	BOARD, REAR LIGHT, L.	1	左后尾灯安装板
14	6.2.01.0070	BOARD, REAR CONNECT	1	后连接板
15	8.1.01.0010	BOLT M6X20	10	安装螺栓
16	0.03.00230	NUT M6	8	螺母 M6 (防滑)
17	6.2.01.0560	SCREW	12	膨胀螺钉
18	6.2.01.0080	BOARD, REAR LIGHT, R.	1	右尾灯安装板
19	6.2.01.0090	REAR MUD GUARD RIGHT	1	后护罩右边条
20	6.2.01.0100	FOOTREST RIGHT	1	右脚踏板
21	1.5.01.0010	FOOTREST Bracket	2	脚踏支架
22	8.2.01.0010	RUBBER PAD	16	弹性安装螺母
23	6.2.01.0110	PLASTIC PLATE	1	底板护板
24	6.2.01.0120	HEAT INSULATION THECA E	1	隔热膜 E
25	6.2.01.0130	HEAT INSULATION THECA F	1	隔热膜 F
26	6.2.01.0140	BATTERY MOUNTING PAD	2	电瓶缓冲海绵 160X30X5
27	7.3.01.1000	TOOL	1	随车工具组
28	6.2.01.0150	HEAT INSULATION THECA D	1	隔热膜 D
29	6.1.01.0060	SEAT ADIABATIC PELLICIE	2	坐垫隔热膜
30	6.2.01.0170	REAR MUD GUARD LEFT	1	后护罩左边条
31	6.2.01.0180	FOOTREST LEFT	1	左脚踏板
32	0.01.00530	BOLT M6X30	2	螺栓 M6X30

4 FRONT BODY

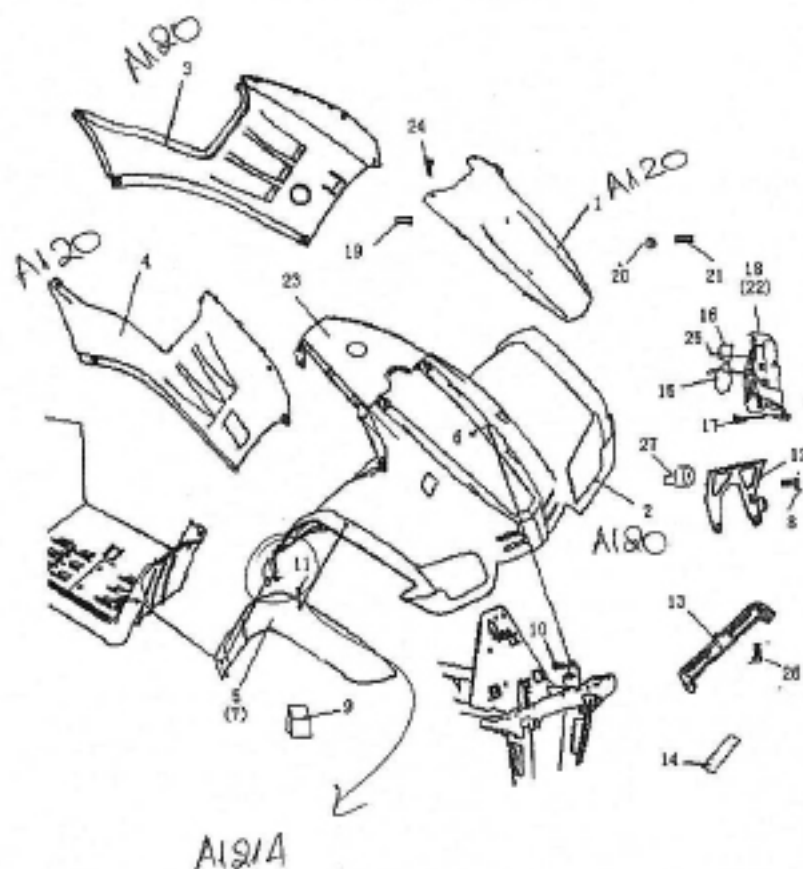


REF. No.	PART NO.	DESCRIPTION	Q'TY	名称
1	62.01.029001	FRONT COVER (BK) A120	1	前面罩装饰板(黑色)
		FRONT COVER (CA)	1	前面罩装饰板(迷彩)
2	62.01.003024	FRONT BODY (GR)	1	前面罩(军绿) WY-12
	62.01.003023	FRONT BODY (OR)		前面罩(橘黄) WY-11
	62.01.003002	FRONT BODY (RE)	1	前面罩(本田红) WY-02
		FRONT BODY (CA)	1	前面罩(迷彩)
	62.01.003001	FRONT BODY (BK) A120	1	前面罩(黑色) WY-01
3	62.01.031023	SIDE COVER LEFT (GR)	1	左侧板(军绿) WY-12
	62.01.031024	SIDE COVER LEFT (OR)	1	左侧板(橘黄)
	62.01.031002	SIDE COVER LEFT (RE)	1	左侧板(本田红)
		SIDE COVER LEFT (RE)	1	左侧板(迷彩)
	62.01.031001	SIDE COVER LEFT (BK)	1	左侧板(黑色)
4	62.01.032023	SIDE COVER RIGHT (GR)	1	右侧板(军绿)
	62.01.032024	SIDE COVER RIGHT (OR)	1	右侧板(橘黄)
	62.01.032002	SIDE COVER RIGHT (RE)	1	右侧板(本田红)
		SIDE COVER RIGHT (CA)	1	右侧板(迷彩)
	62.01.032001	SIDE COVER RIGHT (BK) A120	1	右侧板(黑色)
5	62.01.0330	MUD GUARD RIGHT	1	前护罩右边条
6	0.03.00230	NUT M6	16	螺母 M6 (防滑)
7	62.01.0340	mud GUARD LEFT	1	前护罩左边条
8	0.01.03230	BOLT M6X10	2	螺栓 M6X10
9	62.01.0430	PLUNG	2	方塞
10	8.1.01.0010	BOLT M6X20	16	安装螺栓
11	62.01.0570	SCREW A120	12	膨胀螺钉
12	2.6.01.0181	UP BRACKET RADIATOR	1	水箱上安装板

5 A-ARM

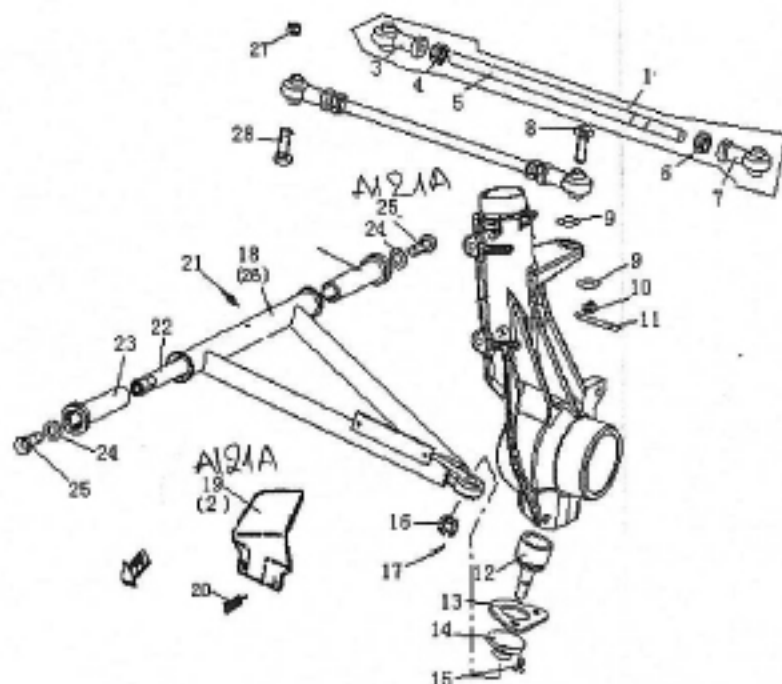


REF. No.	PART No.	DESCRIPTION	Q'TY	名称
1	3.1.01.1000	TIE ROD ASSY	2	转向横拉杆组件
2	6.2.01.0450	A-ARM SHIELD RIGHT A121A	1	前右轴挡片
3	3.1.01.1040	TIE ROD END B	2	球头节 B
4	0.03.01320	JAM NUT(RIGHT)	2	螺母 M12x1.25
5	3.1.01.1020	TIE ROD	2	横拉杆
6	8.2.01.0020	JAM NUT(LEFT)	2	转向拉杆锁紧螺母
7	3.1.01.1010	TIE ROD END A	2	球头节 A
8	0.01.00733	BOLT M10X1.25X55	2	螺栓 M10X1.25X55
9	0.04.00410	WASHER	4	垫圈 10
10	0.03.01030	NUT M10X1.25	2	开槽螺母 M10X1.25
11	0.08.02300	COTTER PIN	2	开口销 2.5X20
12	4.2.01.1010	BALL JOINT STUD	2	前减振器支撑联轴节
13	4.2.01.1020	BALL JOINT MOUNTING BRACKET	2	联轴节安装板
14	4.2.01.1030	BALL JOINT CUP	2	橡胶盖
15	0.02.00890	BOLT M6X12	4	十字槽沉头螺栓 M6X15
16	0.03.01030	NUT M10	2	开槽螺母 M10X1.25
17	0.08.00100	COTTER PIN	2	开口销 2.5X25
18	1.3.01.1010	A-ARM LEFT	1	左 A 臂焊接组件
19	6.2.01.0440	A-ARM SHIELD LEFT A121A	1	前左轴挡片
20	0.02.00690	SCREW M5X12	4	十字槽盘头螺钉 M5X12
21	8.5.01.0010	GREASE FITTING	2	M6 油杯
22	1.3.01.1020	A-ARM PIVOT SHAFT	2	A 臂轴
23	1.3.01.1030	BUSHING	4	内轴套
24	0.04.00810	WASHER 10	4	弹垫 10
25	0.1.01.0000	BOLT M10X25 A121A	4	A 臂轴安装螺栓
26	1.3.01.1050	A-ARM RIGHT	1	右 A 臂焊接组件
27	0.03.00530	NUT M10X1.25	2	螺母 M10x1.25
28	0.01.02730	BOLT M10X1.25X55	2	螺栓 M10x1.25x55

6 WHEEL FRONT

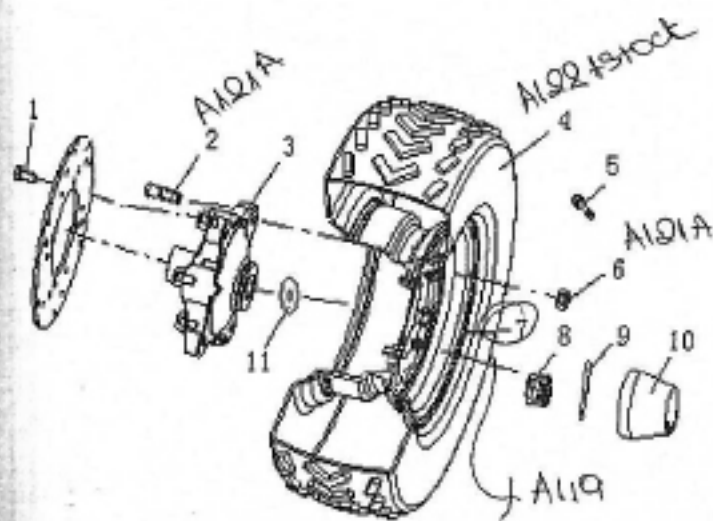


REF. No.	PART No.	DESCRIPTION	QTY	名称
1	0.02.02430	BOLT M8X20	8	内六角平圆头螺钉 M8X20
2	8.1.01.0040	WHEEL STUD A121A	8	联接螺栓
	8.1.01.0050	WHEEL STUD A121A	8	联接螺栓 (铝轮钢专用)
3	4.1.01.0012	HUB ASSY SHRT	2	前轮毂B
4	4.1.01.0120	TIRE FRONT A122 stock	2	前轮胎 AT25X8-12 (越野胎)
5	4.1.01.0210	PLUG PIPE	2	气门嘴组件
6	0.03.00530	LUG NUT M10X1.25	8	螺母 M10X1.25
	8.2.01.0040	NUT M10X1.25 A121A	8	前后轮锁紧螺母 (铝轮钢专用)
7	4.1.01.0190	WHEEL FRONT A119	2	前轮钢(铁)
	4.1.01.0180	WHEEL FRONT	2	前轮钢(铝合金)
8	8.2.01.0050	SLOTTED NUT M16X1.5	2	开槽螺母 M16X1.5
9	0.08.00200	COTTER PIN	2	开口销 4X28
10	6.2.01.0470	HUB CAP 2-LOBE AWD	2	轮毂盖
11	0.04.03450	WASHER	2	垫圈 16x36x3

7 WHEEL REAR

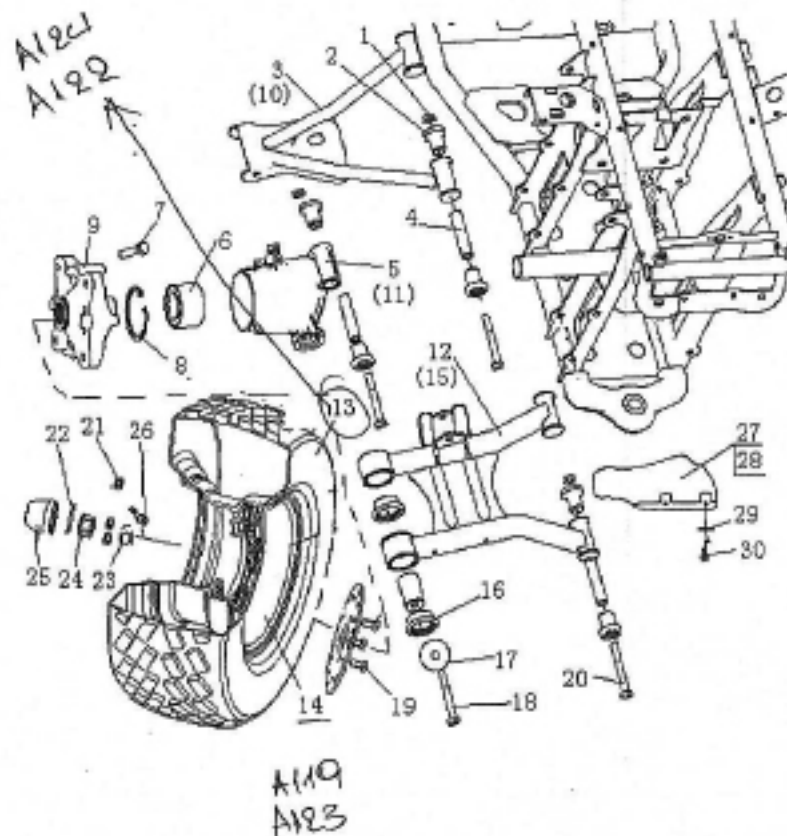


REF. No.	PART No.	DESCRIPTION	QTY	名称
1	0.03.00530	NUT M10X1.25	8	螺母 M10x1.25
2	6.2.09.0050	BUSHING II	20	内轴套 II
3	1.3.09.1010	TOP, SWINGARM ARM, LEFT	1	左后上摇臂焊接组件
4	1.3.09.0020	BUSHING 16x74	10	衬套 16x74
5	4.1.09.0031	WHEEL BOSS, LEFT	1	左后轮毂连接座 (欧标)
6	0.05.00260	BEARING	2	轴承 DAC407440
7	8.1.01.0040	WHEEL STUD	8	联接螺栓
	8.1.01.0050	WHEEL STUD	8	联接螺栓 (铝轮钢专用)
8	0.04.03810	WASHER 75	2	孔用弹性挡圈 75
9	4.1.09.0020	HUB, WHEEL, REAR	2	后轮毂 A
10	1.3.09.3010	TOP, SWINGARM ARM, RIGHT	1	右后上摇臂焊接组件
11	4.1.09.0011	WHEEL BOSS, RIGHT	1	右后轮毂连接座 (欧标)
12	1.3.09.2010	BASE, SWINGARM ARM, LEFT	1	左后下摇臂焊接组件
13	4.1.01.0160	TIRE REAR A122, A124	2	后轮胎 AT25x10-12 (公路花纹)
14	4.1.09.0080	RIM REAR A119, A123	2	后轮钢
	4.1.09.0070	RIM REAR	2	后轮钢 (铝合金)
15	1.3.09.4010	BASE, SWINGARM ARM, RIGHT	1	右后下摇臂焊接组件
16	6.2.09.0060	BUSHING III	8	内轴套 III
17	8.9.09.0010	WASHER 10.5x49x2.5	4	垫片 10.5x49x2.5
18	0.01.12420	BOLT M10x65	4	螺栓 M10x65
19	0.02.02430	BOLT M8x20	8	内六角平圆头螺钉 M8x20
20	0.01.12120	BOLT M10x1.25x95	10	螺栓 M10x1.25x95
21	0.03.00530	NUT M10X1.25	8	螺母 M10x1.25
	8.2.01.0040	WHEEL LOCKNUT	8	前后轮锁紧螺母 (铝轮钢专用)
22	0.08.00300	COTTER PIN	2	开口销 4x36
23	8.8.09.0030	WASHER 19.5x36x3	2	垫圈 19.5x36x3
24	8.2.09.0010	NUT SLOTTED M19x1.5	2	开槽螺母 M19x1.5
25	6.2.01.0470	HUB CAP	2	轮毂盖
26	4.1.01.0210	PLUG PIPE	2	气门嘴组件

8 BACK-WHEEL DRIVE

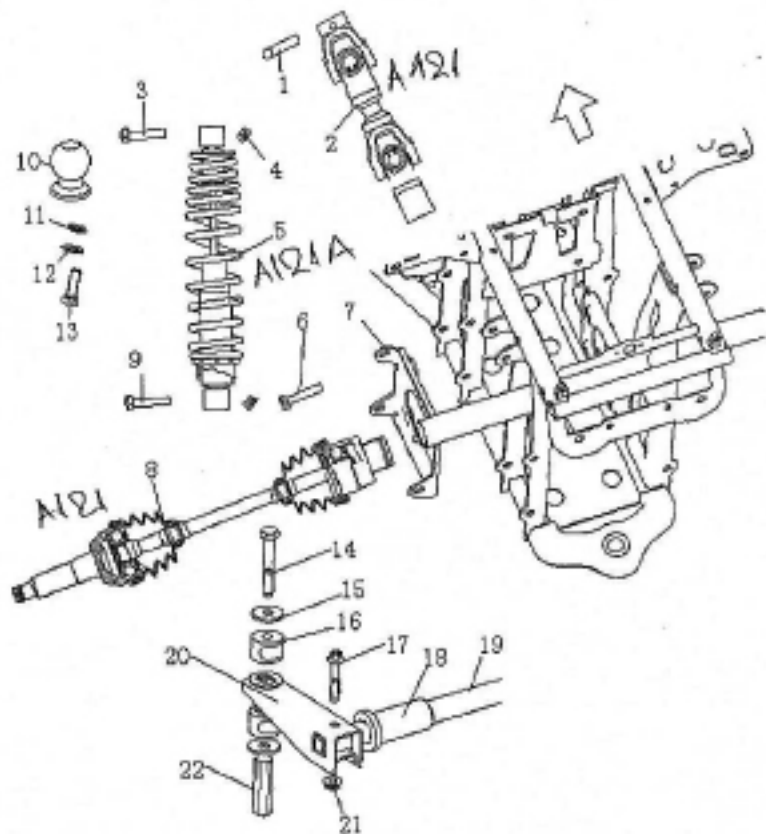


REF. No.	PART No.	DESCRIPTION	QTY	名称
1	3.1.01.0040	ROLL PIN	1	弹性销 8x40
2	3.1.09.0010	BACK PROP SHAFT A121	1	万向节III
3	0.01.01733	BOLT M10x1.25x60	2	螺栓 M10x1.25x60
4	0.03.00530	NUT M10x1.25	4	螺母 M10x1.25
5	4.2.09.0010	ABSORBER REAR A121A	2	后减震
6	0.02.04330	BOLT M12X25	8	内六角圆柱头螺钉 M12x25
7	1.3.09.0010	STATOR	1	后桥左安装板
8	3.1.09.0020	BACK DRIVE SHAFT A121	2	内外球笼轴II
9	0.01.02730	BOLT M10x1.25x55	2	螺栓 M10x1.25x55
10	8.2.01.0060	BALL NUT	1	球形螺母 (选装件)
11	0.04.01810	WASHER 16	1	弹垫 16 (选装件)
12	0.04.02650	WASHER 16	1	垫片 16x30x3 (选装件)
13	0.01.03150	BOLT	1	螺栓 M16x2x50 (选装件)
14	0.01.11930	BOLT	4	螺栓 M10x1.25x65
15	8.8.09.0020	WASHER	8	垫片 11x32x3
16	6.2.09.0010	BALANCER BUFFER	8	平衡器缓冲橡皮
17	0.01.01230	BOLT	2	螺栓 M8x45
18	6.2.09.0020	BUSHING I	2	内轴套 I
19	1.4.09.0010	BALANCER TUBE	1	平衡器方管
20	1.4.09.0020	BALANCER BRACKET	2	平衡器安装支架
21	0.03.00130	NUT	2	螺母 M8
22	1.4.09.0030	BALANCER COUPLING	2	平衡器联结杆

9 REAR GEAR-BOX

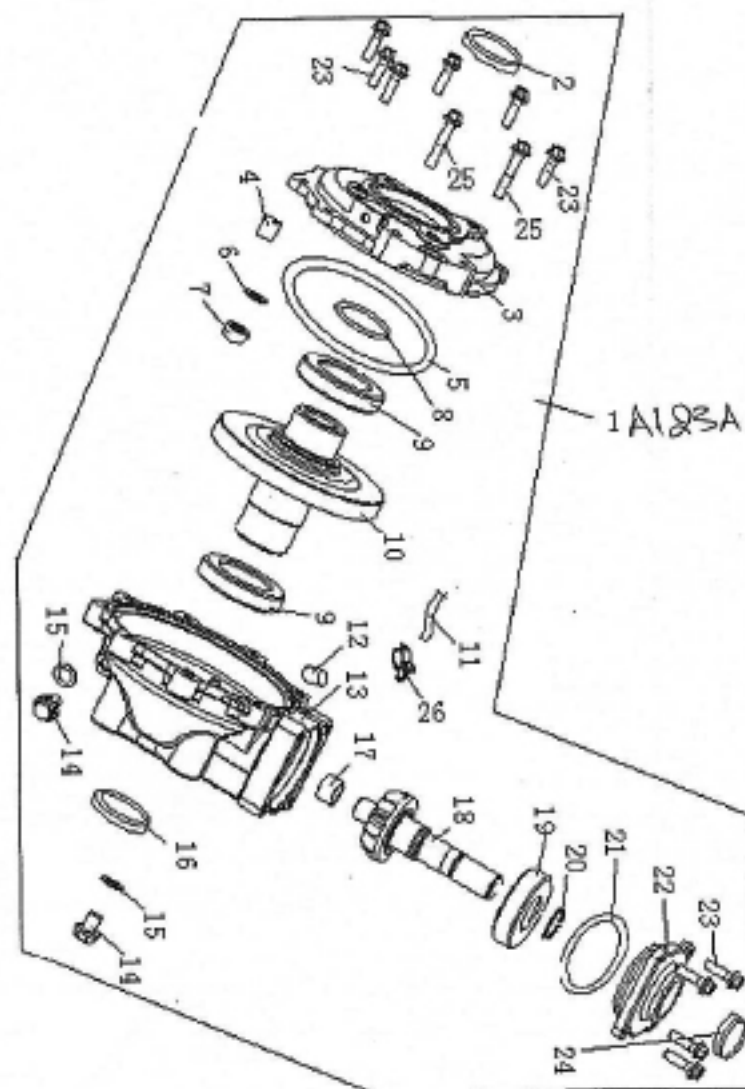


REF. No.	PART No.	DESCRIPTION	QTY	名称
1	3.309.0000	REAR GEARBOX ASSY 1A123A	1	后桥总成
2	8.901.0020	SEAL 50X70X8	1	油封 50X70X8
3	3.301.0010	OUTPUT COVER	1	后桥盖
4	3.201.0010	DOWEL PIN	1	定位销
5	8.301.0020	O-RING 176X2.65	1	O 型圈 176X2.65
6	8.801.0040	SHIM	1	调整垫圈
7	8.801.0050	SHIM	1	垫圈 D
8	3.301.0040	THRUST BUTTON	1	限位销
9	0.05.00500	BEARING 110	2	轴承 6010
10	3.309.0020	RING GEAR	1	后桥输出齿轮
11	3.301.0060	VENT	1	后桥通风管
12	3.301.0070	BEARING	1	通气嘴 (弯)
13	3.301.0080	DRIVE HOUSING	1	后桥体
14	8.101.0060	OIL PLUG	2	后桥加放油螺栓 M12. 2x14
15	8.801.0060	WASHER	2	铝垫 A
16	8.901.0020	SEAL 50X70X8	1	油封 50X70X8
17	0.08.00600	BUSHING P23X20X15	1	轴套 P23X20X15
18	3.309.0010	PINION SHAFT	1	后桥输入齿轮
19	0.05.00600	BEARING 6306ST	1	轴承 6306P6
20	8.701.0010	RETAINER 30	1	挡圈 30
21	8.301.0030	O-RING 79X4	1	O 型圈 79X2.65
22	3.301.0130	INPUT COVER	1	后桥前盖
23	0.91.03430	BOLT M8X28	10	螺栓 M8x28
24	8.901.0040	SEAL 25X35X5	1	油封 25X35X5
25	0.81.01230	BOLT M8X45	2	螺栓 M8X45
26	6.401.0040	CLIP 10	2	卡箍 10

10 FRONT GEAR-BOX(2007.2开始)

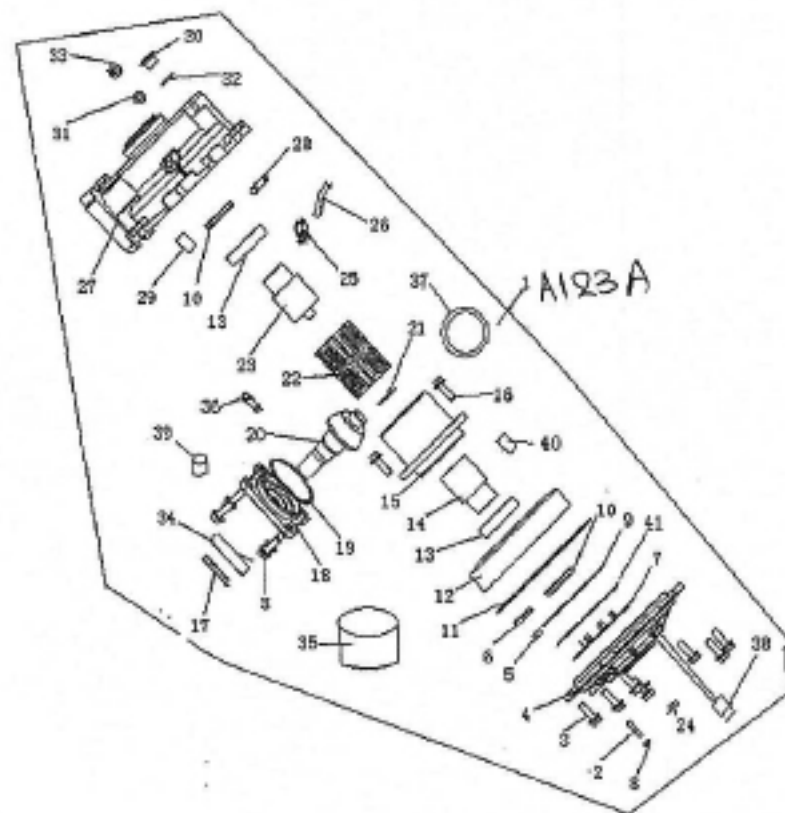


REF. No.	PART NO.	DESCRIPTION	Q'TY	名称
1	3.4.01.0001	FRONT GEAR-BOX A123A	1	前桥总成
2	0.02.02030	BOLT M5x25	1	内六角凹端紧定螺钉 M5x25
3	0.01.05230	BOLT M8x25	11	螺栓 M8X25
4	3.4.01.0010	FRONT GEAR-BOX COVER	1	前桥盖
5	3.4.01.0020	ADJUST CHUNK	1	调高块
6	3.4.01.0030	COPPER CHIP	1	顶片
7	3.4.01.0040	REVOLVE CHIP	1	拨片
8	0.03.02050	NUT M5	1	螺母 M5
9	3.4.01.0060	WASHER 98	1	挡圈 98
10	3.4.01.0070	SEAL 35x47x7	2	油封 35X47X7
11	3.4.01.0080	O-RING 170x2.3	1	O 形圈 170X2.3
12	3.4.01.0280	OUTPUT GEAR	1	输出锥齿轮
13	0.05.02500	BEARING 6007	2	轴承 6007
14	3.4.01.0100	RIGHT AXIS	1	右内轴
15	3.4.01.0110	CONJUNCTION BULK	1	连接座
16	0.02.02130	BOLT M8x24	6	内六角圆柱头螺钉 M8X24
17	3.4.01.0120	SEAL 25X35X5	1	油封 25X35X7
18	3.4.01.0130	INPUT GEAR COVER	1	前桥小盖
19	3.4.01.0140	O-RING 70x2.2	1	O 形圈 70X2.2
20	3.4.01.0150	INPUT GEAR	1	输入锥齿轮
21	3.4.01.0180	NEEDLE BEARING 17x30x2	1	滚针轴承 17X30X2
22	3.4.01.0170	IMMOBILITY SHELF	1	保持架
23	3.4.01.0180	LEFT AXIS	1	左内轴
24	3.4.01.0190	WASHER 12	1	垫圈 12
25	3.4.01.0040	CLIP 10	1	卡簧 10
26	3.3.01.0060	VENT	1	后桥进气管
27	3.4.01.0200	DRIVE HOUSING	1	前桥体

10 FRONT GEAR-BOX(2007.2开始)

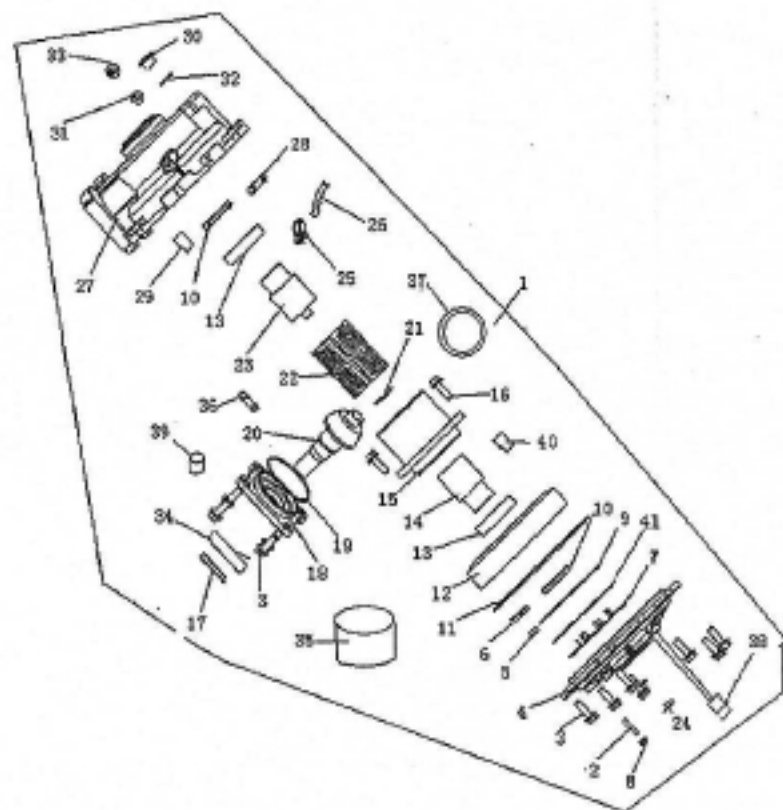


REF. No.	PART NO.	DESCRIPTION	Q'TY	名称
28	3.3.01.0070	BEARING	1	通气嘴 (弯)
29	3.2.01.0010	DOWEL PIN	1	定位销
30	2.2.01.0190	OIL PLUG	1	窥视盖
31	8.8.01.0140	WASHER B	1	铝垫 B
32	0.06.00400	O-RING 14X2.65	1	O 形圈 14X2.65
33	3.2.01.0480	DRAIN SCREW	1	放油螺塞组件
34	0.05.00600	BEARING 6306	1	轴承 6306
35	3.4.01.0240	BUSHING P84x89x46.5	1	轴套 84X89X46.5
36	3.4.01.0271	ROLLER	14	滚珠
37	3.4.01.0300	IMMOBILITY SHELF SPRING	2	保持架弹簧
38	3.4.01.0250	SOCKET	1	插件 DJ7021A-2.8-11
39	3.4.01.0230	BUSHING P16x20x12.5	1	轴套 16X20X12.5
40	3.4.01.0220	BUSHING P17x19x10	1	轴套 17x19x10
41	3.4.01.0050	WASHER 95	1	垫圈 95

11 FRONT-WHEEL DRIVE

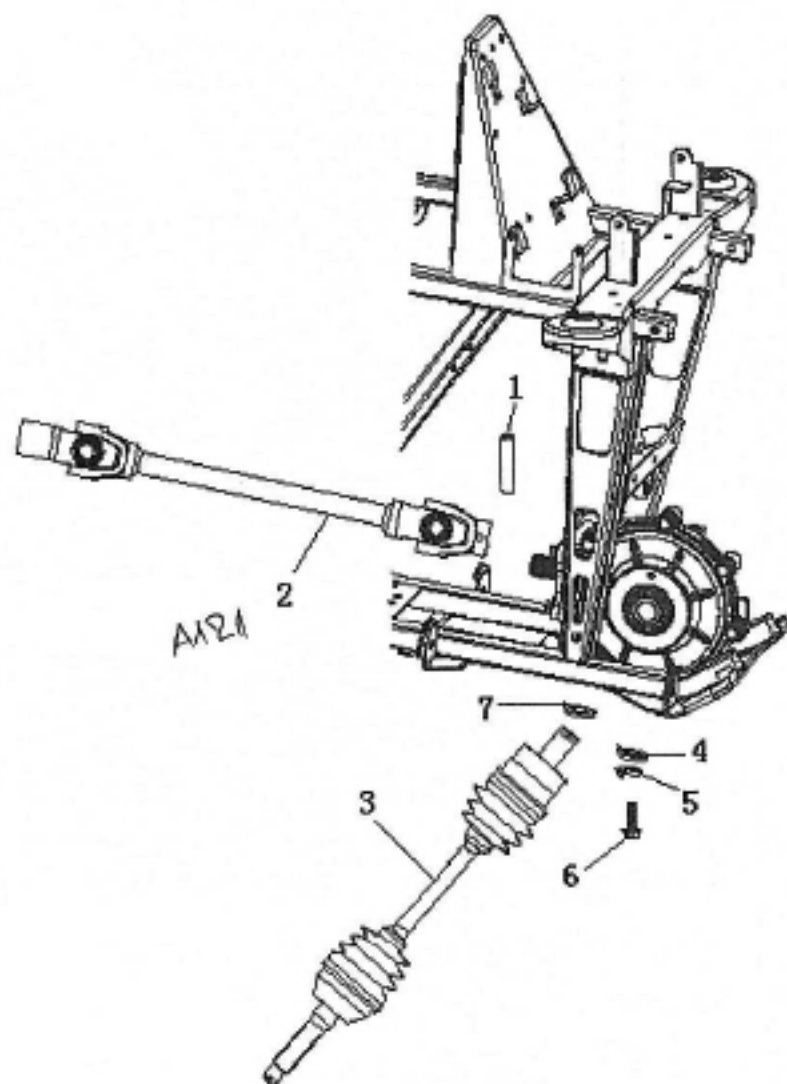


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	3.1.01.0040	ROLL PIN 8x40	1	弹性销 8x40
2	3.1.01.0050	FRONT PROPSHAFT ASSY	1	万向节 II
3	4.1.01.0250	FRONT DRIVE SHAFT	2	内外球笼轴
4	0.04.00410	WASHER 10	4	垫圈 10
5	0.04.00810	WASHER 10	4	弹垫 10
6	0.01.08130	BOLT M10X25	4	螺栓 M10X25
7	4.1.01.0260	RETAINER II	2	轴用钢丝挡圈 II

12 TRANSMISSION

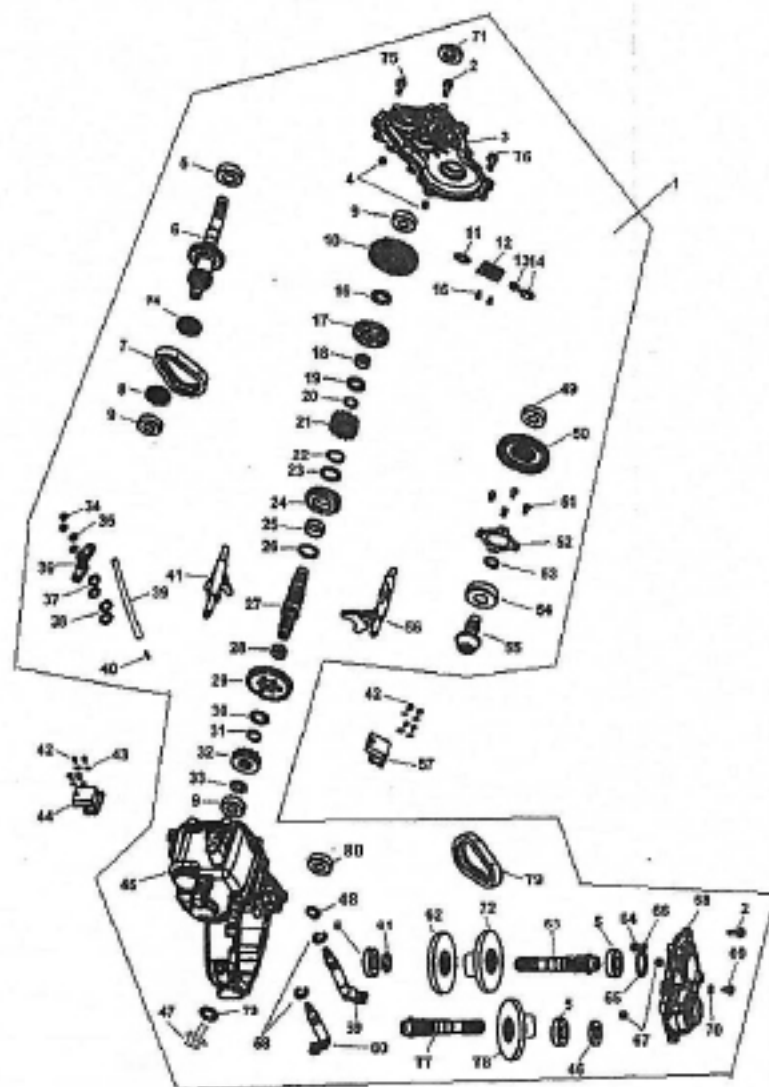


REF. No.	PART NO	DESCRIPTION	Q'TY	名称
1	3.2.09.0001	TRANSMISSION ASSY	1	变速箱总成
2	0.01.03430	BOLT M8X28	17	螺栓 M8X28
3	3.2.01.0040	MAIN COVER	1	变速箱左盖
4	3.2.01.0010	DOWEL PIN	2	定位销
5	0.05.00700	BEARING 6205c3	4	轴承 6205C3
6	3.2.01.0050	INPUT SHAFT	1	主轴
7	3.2.01.0060	CHAIN	1	齿形链
8	3.2.01.0070	GEAR 16T	1	低速主动齿轮
9	0.05.00800	BEARING 6204	3	轴承 6204
10	3.2.01.0080	GEAR,HELICAL 35T	1	过激齿轮 1
11	3.2.01.0090	INTERLOCK PIN	2	限位块
12	3.2.01.0100	INTERLOCK BRACKET	1	限位块压板
13	3.2.01.0110	SPRING	1	限位块弹簧
14	3.2.01.0090	INTERLOCK PIN	1	限位块
15	C.02.00630	SCREW M5X12	2	十字槽盘头螺钉 M5X12
16	8.8.01.0070	SPACER	1	垫片 25.5A
17	3.2.01.0140	GEAR 31T	1	高速从动齿轮
18	8.4.01.0010	NEEDLE BEARING 25	1	滚针轴承 25X29X10
19	8.8.01.0080	THRUST WASHER	1	垫片 25.5B
20	0.04.01310	SNAP RING	1	挡圈 25
21	3.2.01.0170	DOG GEAR	1	双面换挡套
22	0.04.01410	SNAP RING	1	挡圈 32
23	8.8.01.0090	THRUST WASHER	1	垫片 32.5
24	3.2.01.0190	SPROCKET 24T	1	从动链轮
25	8.4.01.0020	NEEDLE BEARING 25	1	滚针轴承 32
26	8.8.01.0090	THRUST WASHER	1	垫片 32.5
27	3.2.01.0220	SHAFT	1	副轴

13 SUPPORT BRACKET

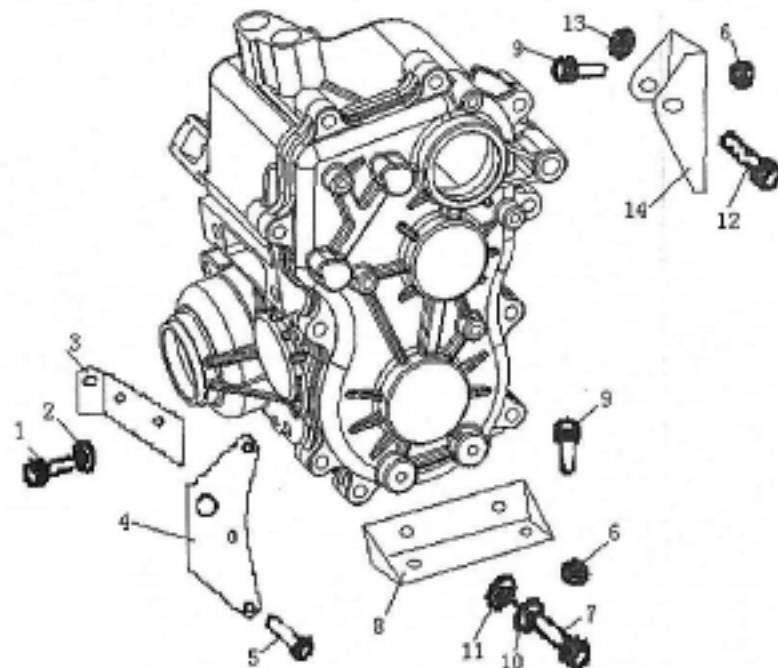


REF. No.	PART No.	DESCRIPTION	Q'TY	名称
1	0.02.00330	BOLT M12X20	2	内六角圆柱头螺栓 M12X20
2	0.04.00910	WASHER 12	2	弹垫 12
3	2.7.01.0010	GEORBOX BRACKET RIGHT	1	右摇臂连接板
4	2.7.01.0020	GEORBOX BRACKET LEFT	1	左摇臂连接板
5	0.01.01130	BOLT M8X33	3	螺栓 M8X33
6	0.03.00130	NUT M8	3	螺母 M8
7	0.01.01930	BOLT M10X20	2	螺栓 M10X20
8	2.7.01.0030	GEORBOX BRACKET DOWN	1	变速箱左下安装板
9	0.01.00930	BOLT M8X20	2	螺栓 M8X20
10	0.04.00810	WASHER10	2	弹垫 10
11	0.04.00410	WASHER	2	垫圈 10
12	0.01.02930	BOLTM10X1.25X68	2	螺栓 M10X1.25X68
13	0.03.00530	NUT M10	2	螺母 M10X1.25
14	2.7.01.0040	GEORBOX BRACKET UP	1	变速箱上安装板

14 SHIFT ROD

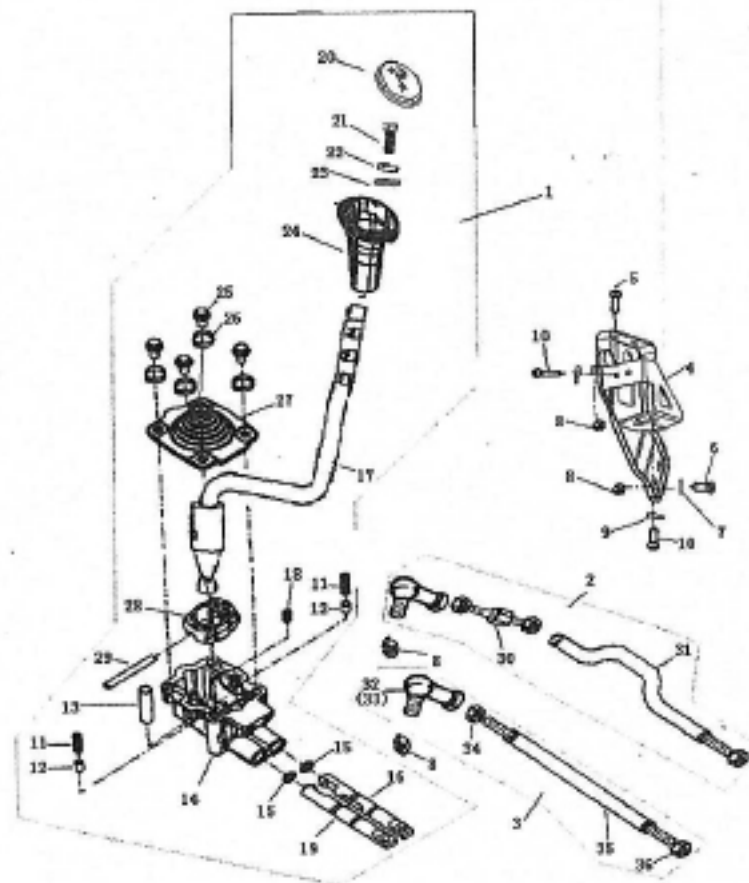


REF. No.	PART No.	DESCRIPTION	QTY	名称
1	4.6.01.1000	SHIFTER ASSY MOUNTING	1	换挡器
2	4.6.01.3000	SHIFTER MOUNTING ROD B	1	换挡器拉杆 B
3	4.6.01.4000	SHIFTER MOUNTING ROD A	1	换挡器拉杆 A
4	4.6.01.0020	SHIFTER MOUNTING BRACKET	1	换挡器安装板组件
5	0.01.02530	BOLT M6X40	2	螺栓 M6X40
6	0.01.02430	BOLT M6X35	2	螺栓 M6X35
7	0.04.00110	WASHER 6	1	垫片 6
8	0.03.00330	NUT M6	8	螺母 M6
9	0.04.00610	WASHER 6	4	弹垫 6
10	0.01.00430	BOLT M6X15	4	螺栓 M6X15
11	4.8.01.1080	BIG SPRING	2	大弹簧
12	4.6.01.1090	DETENT PIN	2	定位销
13	4.6.01.1100	DOWEL PIN	1	限位销
14	4.6.01.1110	SHIFTER PEDESTAL	1	换挡器底座
15	8.3.01.0040	O-RING	2	O 型圈 9.4X1.6
16	4.6.01.1130	SELECTOR SLIDES HIGH	2	高速滑杆
17	4.6.01.3020	SHIFT LEVER	1	换挡杆
18	4.8.01.1070	SMALLSPRING	1	小弹簧
19	4.6.01.1140	SELECTOR SLIDES LOW	1	低速滑杆
20	4.6.01.1010	BOOT	1	握手盖
21	0.01.00430	BOLT M6X15	2	螺栓 M6X15
22	0.04.00610	WASHER 6	1	弹垫 6
23	0.04.00110	WASHER 6	1	垫片 6
24	4.6.01.1020	KNOB	1	球形握把手
25	0.01.06920	BOLT M6X15	4	螺栓 M6X15
26	0.04.00110	WASHER 6	1	垫片 6

15 SHOCK ABSORBER FRONT

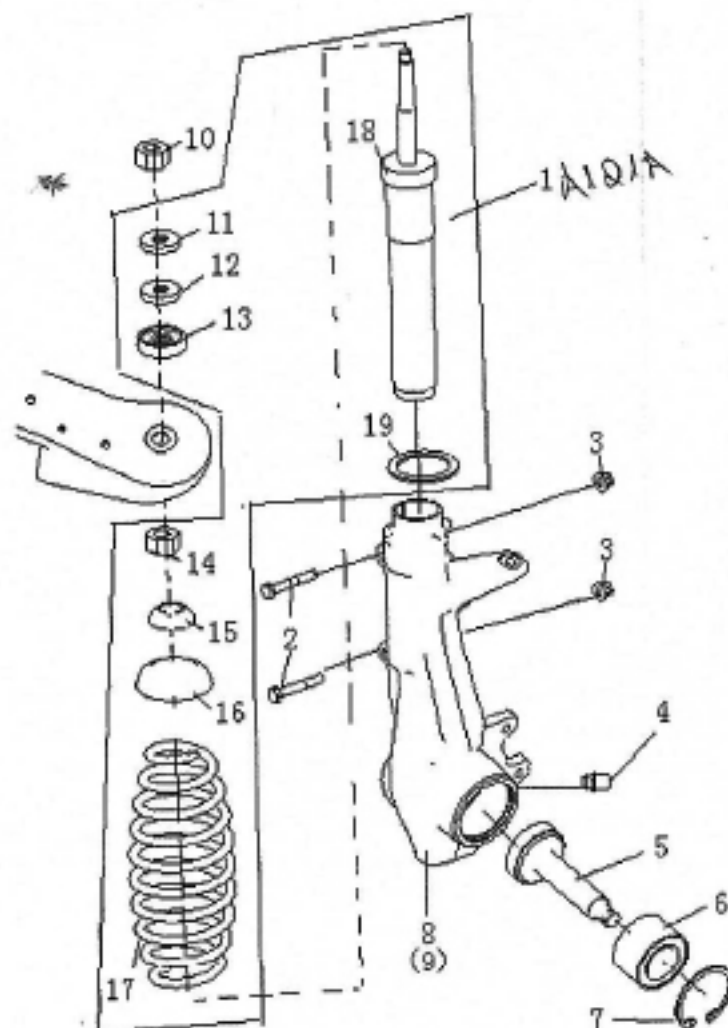


REF. No.	FART No.	DESCRIPTION	Q'TY	名称
1	4.201.1130	FRONT SHOCK ABSORBER (BLACK)	2	前减震器组件(黑)
	4.201.1131	FRONT SHOCK ABSORBER (RED)	2	前减震器组件(红)
2	0.01.02630	BOLT M8X55	4	螺栓 M8X55
3	0.03.00130	NUT M8	4	螺母 M8
4	8.501.0010	GREASE FITTING	2	油杯 M6
5	4.101.0230	SPINDLE BOLT	2	球笼轴
6	0.05.00400	BEARING	2	轴承 DAC35640037
7	0.04.01210	CIRCLIP 65	2	挡圈 65
8	4.201.1140	STRUT BODY LEFT	1	前减震器左支撑
9	4.201.1150	STRUT BODY RIGHT	1	前减震器右支撑
10	0.03.01530	NUT M14X1.5	2	螺母 M14X1.5
11	8.801.0150	WASHER 14	2	垫圈 14
12	4.201.1050	SPACER RUBBER	2	缓冲垫
13	4.201.1060	UPPER PIVOT BALL	2	球碗 A
14	8.201.0080	NUT M14X1.5	2	螺母 M14X1.5
15	4.201.1080	LOWER PIVOT BALL	2	球碗 B
16	4.201.1090	SPRING RETAINER	2	前减震弹簧座
17	4.201.1100	SPRING (BLACK)	2	前减震簧(黑)
	4.201.1101	SPRING (RED)	2	前减震簧(红)
18	4.201.1110	STRUT BUMPER	2	前减震器贮液筒组件
19	8.801.0160	SPRING RETAINER	2	大垫圈

15 STEERING COLUMN

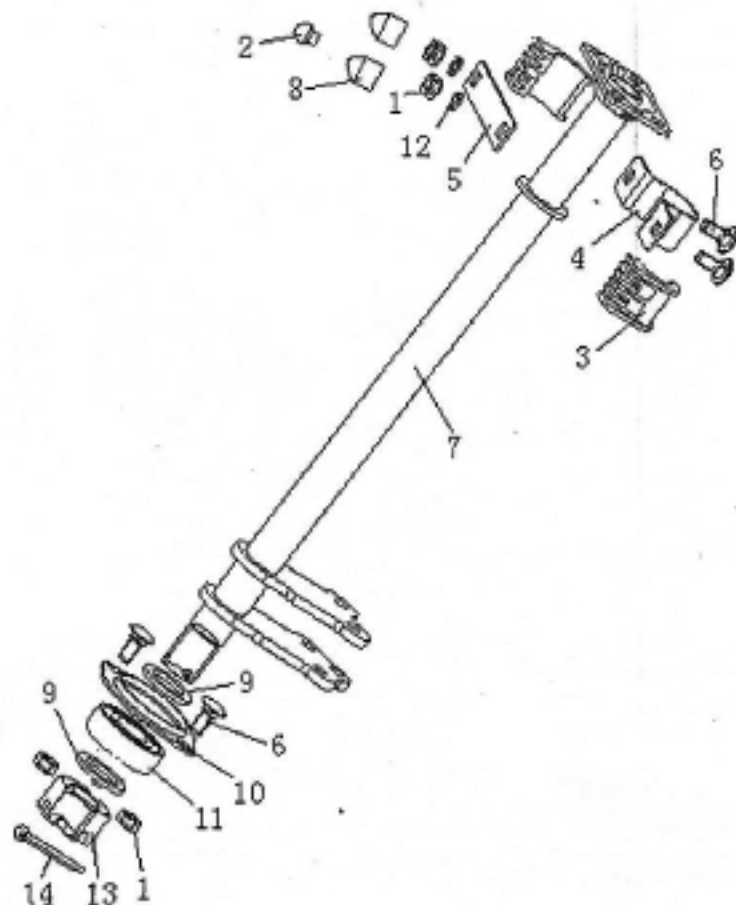


REF. No.	PART No.	DESCRIPTION	QTY	名称
1	0.03.00130	NUT M8	4	螺母 M8
2	3.5.01.0010	GREASE FITTING	1	油杯 M8
3	1.2.01.0010	BUSHING	2	安装套
4	1.2.01.0020	STEERING CLAMP REAR	1	方向柱上安装固定座
5	1.2.01.0030	STEERING CLAMP FRONT	1	方向柱上缓冲垫
6	8.1.01.0070	BOLT	4	异形螺栓
7	1.2.01.0050	STEERING COLUMN	1	方向柱焊接组件
8	1.2.01.0080	CUP	2	保护罩
9	8.8.01.0250	WASHER	2	垫圈 25
10	1.2.01.0080	BEARING RETAINER	1	轴承盖帽
11	0.05.00300	BEARING	1	轴承 CS205LU
12	0.04.00710	WASHER	2	弹垫 8
13	0.03.01230	RETAINER NUT	1	开槽螺母 M24X2
14	0.08.00400	COTTER PIN	1	开口销 5X40

17 ELECTRICAL SYSTEM

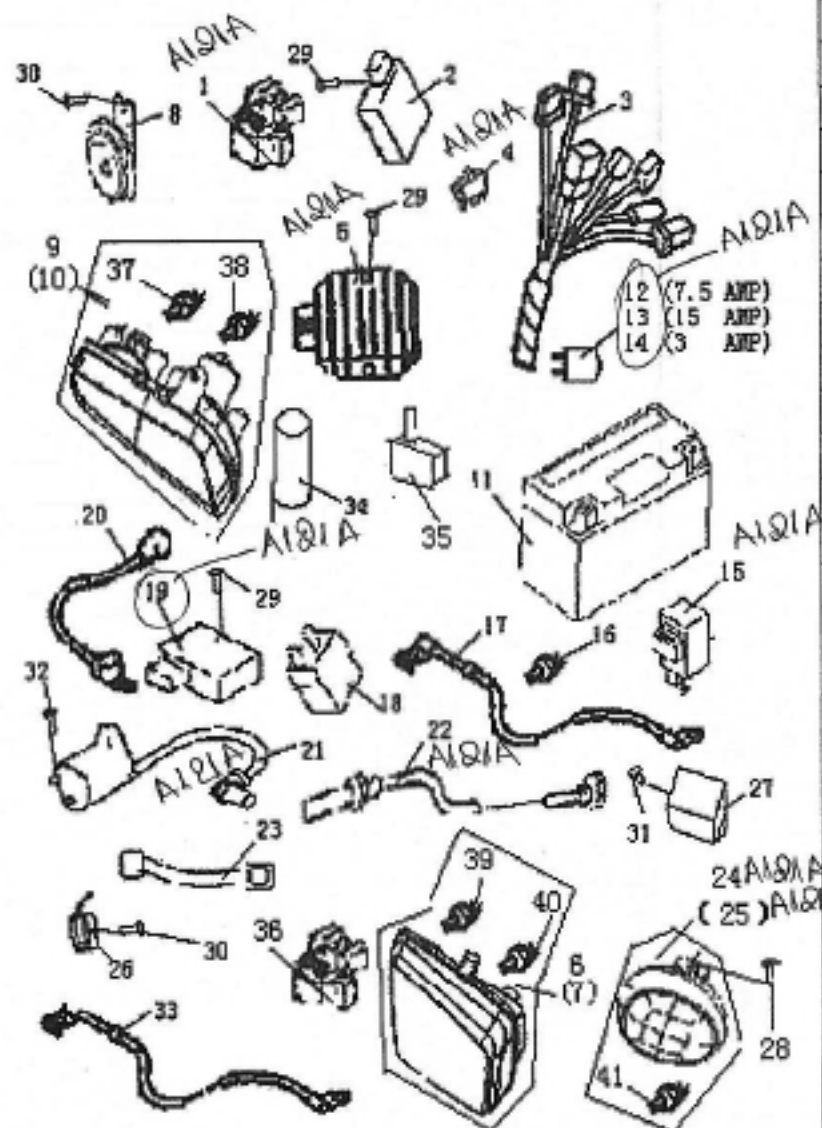


REF. No.	PART No.	DESCRIPTION	Q'TY	名称
1	53.01.0040	STARTER RELAY A1Q1A	1	起动继电器
2	53.01.0051	REVERSE SPEED LIMITER	1	限速器
3	53.01.0061	WIRING HARNESS	1	电缆总成 (欧标)
4	53.01.0070	HAZARD LIGHT SWITCH A1Q1A	1	危急开关
5	53.01.0080	REGULATOR RECTIFIER A1Q1A	1	整流稳压器
6	52.01.0011	HEAD LIGHT, FR, R	1	右前大灯 (欧标)
7	52.01.0021	HEAD LIGHT, FR, L	1	左前大灯 (欧标)
8	53.01.0110	HORN	1	喇叭
9	52.01.0031	TAILLIGHT, L	1	左后尾灯 (欧标)
10	52.01.0041	REAR LIGHT, R	1	右后尾灯 (欧标)
11	53.01.0140	BATTERY	1	电池 12V 14Ah
12	53.01.0150	75 AMP FUSE A1Q1A	1	75 安培保险丝
13	53.01.0160	15 AMP FUSE A1Q1A	2	15 安培保险丝
14	53.01.0170	3 AMP FUSE A1Q1A	1	3 安培保险丝
15	53.01.0180	FLASHER RELAY ASSAY A1Q1A	1	闪光器
16	53.01.0190	ENGINE TEMPERTURE SENSOR	1	温控开关 (75℃)
17	53.01.0200	BATTERY CABLE GROUND	1	电瓶地线
18	53.01.0210	CAPCITOR	1	电容器
19	53.01.0220	TCI A1Q1A	1	点火器
20	53.01.0230	BATTERY CABLE POSITIVE	1	电瓶火线
21	53.01.0240	IGNITON COIL AND WIRE A1Q1A	1	高压包
22	53.01.0251	GEAR SENSOR A1Q1A	1	齿轮传感器
23	52.01.0500	BATTERY BELL	1	电瓶扎带
24	52.01.0050	REAR BLINKER RIGHT A1Q1A	1	右后转向灯
25	52.01.0060	REAR BLINKER LEFT A1Q1A	1	左后转向灯
26	53.01.0280	RESISTANCE	1	电阻
27	52.01.0070	LICENSE PLATE LIGHT	1	牌照灯

18 BRAKING SYSTEM

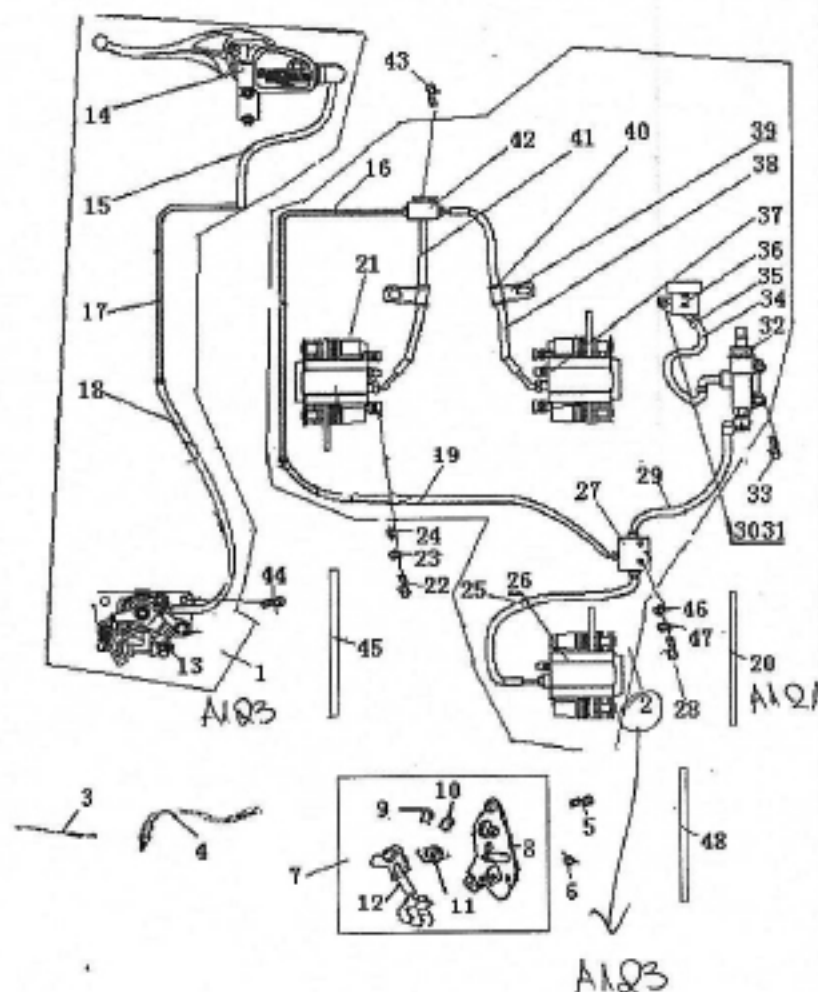


REF. No.	PART No.	DESCRIPTION	QTY	名称
1	43.09.1011	GRIP BRAKE A1Q3	1	手刹组件 (一拖一)
2	43.09.1021	FOOT BRAKE A1Q3	1	脚刹组件 (一拖三)
3	43.01.00120	SPRING, STOP SWITCH	1	刹车拉簧
4	43.01.0080	STOPR SWITCH REAR	1	脚刹开关
5	0.01.00630	BOLT M6X20	3	螺栓 M6X20
6	0.03.00330	NUT M6	2	螺母 M6
7	1.5.01.3000	BRAKE PEDAL	1	脚刹踏板组件
8	1.5.01.3020	FOOT BRAKE MOUNTING PLATE	1	脚刹踏板安装板
9	0.04.01010	RETAINER	1	轴用弹性挡圈
10	8.8.01.0280	WASHES	1	垫圈 14.5
11	1.5.01.3010	RETURN SPRING	1	脚刹踏板扭簧
12	1.5.01.3030	BRAKE PEDAL	1	脚刹踏板焊接组件
13	4.3.01.3051	REAR PUMP LEFT	1	左后碟刹泵
14	4.3.09.0010	MAIN PUMP	1	主制动泵
15	4.3.01.3021	HAND BRAKE HOSE I	1	手刹软管 I
16	4.3.01.3030	BEHIND BRAKE HOSE	1	后刹钢管
17	4.3.09.0020	HAND BRAKE STEEL TUBE	1	手刹钢管
18	4.3.01.3041	HAND BRAKE HOSE	1	手刹软管
19	4.3.01.0030	FOOT BRAKE HOSE I	1	脚刹软管 I
20	4.3.01.3081	FRONT DISC BRAKE A1Q1	2	前碟刹盘 (新状态)
21	4.3.01.3070	BRAKE CALIPER LEFT	1	左前制动卡钳
22	0.01.02133	BOLT M8X25	6	螺栓 M8X25
23	0.04.00710	WASHER 8	6	弹垫 8
24	0.04.00310	WASHER 8	6	垫片 8
25	4.3.01.0040	FOOT BRAKE HOSE II	1	脚刹软管 II
26	4.3.01.3100	FRONT BRAKE PUMP RIGHT	1	右后碟刹泵
27	4.3.01.0050	BRAKE LINE COUPLER III	1	三通 III

19 BUMPER & RACK

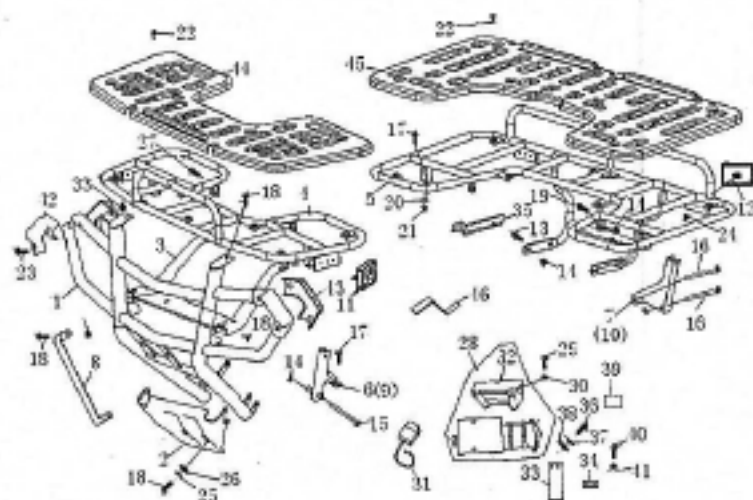


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	1.4.09.0060	BUMPER	1	保险杠组件
2	1.4.09.0120	CONNECTIVE	1	保险杠下安装板
3	1.4.09.0090	CONNECTOR BRACKET	1	支架焊接总成
4	1.4.09.0071	FRONT FRAME	1	前货架组件 (欧标)
5	1.4.09.0080	REAR FRAME	1	后货架组件
6	1.4.01.0070	TRESTLE 2 LEFT	1	前货架左安装支架
7	1.4.09.0130	TRESTLE 3 LEFT	1	后货架左安装板
8	1.4.01.0090	PROTECT POLE	2	水箱防护支架
9	1.4.01.0100	TRESTLE 2 RIGHT	1	前货架右安装支架
10	1.4.01.0100	TRESTLE 3 RIGHT	1	后货架右安装板
11	5.2.01.0110	REAR PROTECT POLE (YELLOW)	2	后反射器 (黄色)
12	5.2.01.0090	REAR PROTECT POLE (RED)	2	后反射器 (红色)
13	0.01.01230	BOLT M8X45	4	螺栓 M8X45
14	0.03.00130	NUT M8	20	螺母 M8
15	0.01.01530	BOLT M8X90	2	螺栓 M8X90
16	0.01.01330	BOLT M8X68	4	螺栓 M8X68
17	0.01.00630	BOLT M6X20	8	螺栓 M6X20
18	0.01.00930	BOLT M8X20	12	螺栓 M8X20
19	0.01.01130	BOLT M8X33	2	螺栓 M8X33
20	0.04.00110	WASHER 6	4	垫圈 6
21	0.03.00330	NUT M6	4	螺母 M6
22	8.1.01.0010	BOLT M6X20	14	安装螺栓
23	8.1.09.0010	BOLT M6x48	4	安装螺栓 6x48
24	0.03.00430	NUT M5	4	螺母 M5
25	0.04.00310	WASHER 8	2	垫片 8
26	0.04.00710	WASHER 8	2	弹垫 8

20 CYLINDER

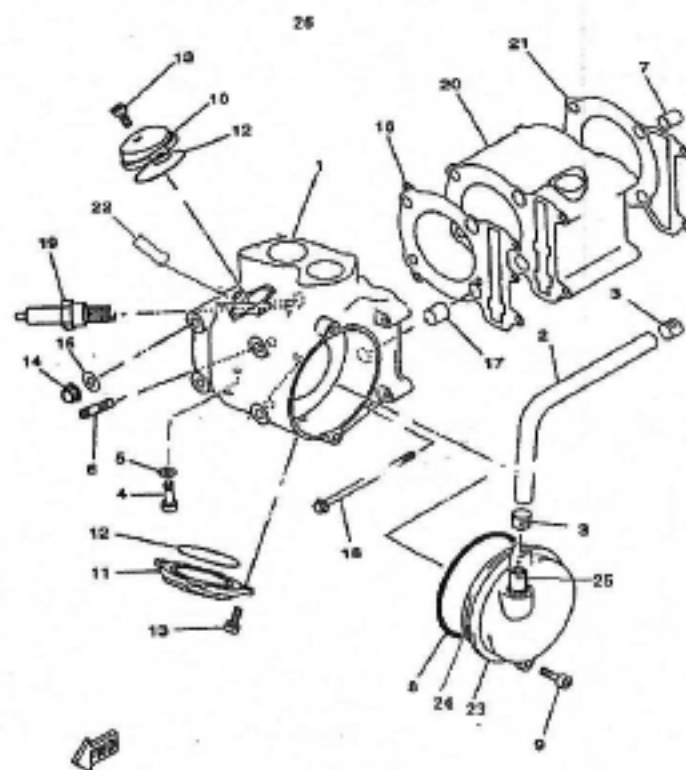


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	2.1.01.1010	CYLINDER HEAD ASSY	1	汽缸头组件
2	2.1.01.0430	PIPE BREATHER1	1	呼吸管
3	6.4.01.0090	HOSE CLAMP 12	2	卡箍Φ12
4	0.01.00330	BOLT M6X12	1	螺栓 M6X12
5	8.8.01.0180	GASKET 6	1	垫圈 6
6	0.01.03820	BOLT STUD M8X36.5	2	双头螺栓 M8X36.5
7	2.1.01.0420	PIN DOWEL 8X14	2	定位销 10X14
8	8.3.01.0050	O-RING 95X3.3	1	O型圈 95X3.3
9	0.02.01240	BOLT SOCKET HEAD M6X20	2	内六角螺栓 M6X20
10	2.1.01.0360	VALVE COVER INTAKE SIDE	1	进气门盖
11	2.1.01.0370	VALVE COVER EXHAUST SIDE	1	排气门盖
12	8.3.01.0060	O-RING 57.5X2.3	2	O型圈 57.5X2.3
13	0.02.01240	BOLT SOCKET HEAD M6X20	5	内六角螺栓 M6X20
14	8.2.01.0090	NUT CROWN M8	4	盖型螺母 M8
15	8.8.01.0170	WASHER PLATE 8	4	垫圈 8
16	2.1.01.0380	GASKET CYLINDER HEAD1	1	缸盖垫
17	2.1.01.0390	PIN DOWEL 10X16	2	缸盖销 10X16
18	8.1.01.0080	BOLT FLANGE M8X120	2	螺栓 M8X120
19	2.1.01.0570	PLUG SPARK(NGK DR8EA)	1	火花塞 DR8EA
20	2.1.01.0400	CYLINDER (1)	1	缸体 (1组)
	2.1.01.0401	CYLINDER (2)	1	缸体 (2组)
21	2.1.01.0410	GASKET CYLINDER	1	缸体垫
22	2.1.01.1030	HOSE TIE-IN		水管接头
23	2.1.01.3020	BREATHER ASSY	1	呼吸盘盖
24	2.1.01.3010	BREATHER I		呼吸盘 I
25	2.1.01.3030	TUBE TIE-IN		管接头

21 CRANKSHAFT COMP

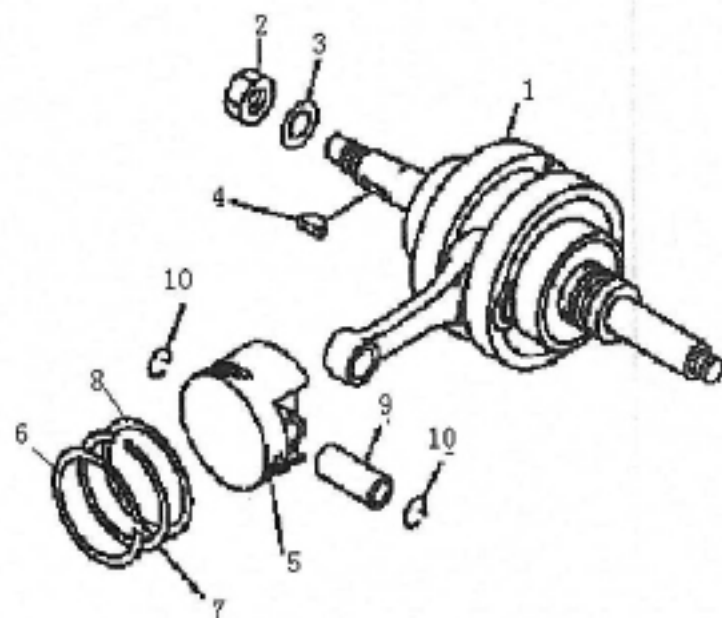


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	2.1.01.0010	CRANKSHAFT ASSY	1	曲轴连杆组件
2	8.2.01.0100	NUT M16X1	1	锁紧螺母 M16X1
3	8.8.01.0190	WASHER PLATE 16	1	垫圈 16
4	2.1.01.0020	KEY WOODRUFF	1	半圆键
5	2.1.01.0060	PISTON (YELLOW)	1	活塞 (黄色)
	2.1.01.0061	PISTON (BLUE)	1	活塞 (蓝色)
6	2.1.01.0040	1ST PISTON RING	1	第一道活塞环
7	2.1.01.0050	2ND PISTON RING	1	第二道活塞环
8	2.1.01.0030	OIL SUPPLY RING	1	组合油环
9	2.1.01.0180	PISTON PIN	1	活塞销
10	8.7.01.0030	CLIP	2	活塞销挡圈

21 VALVE

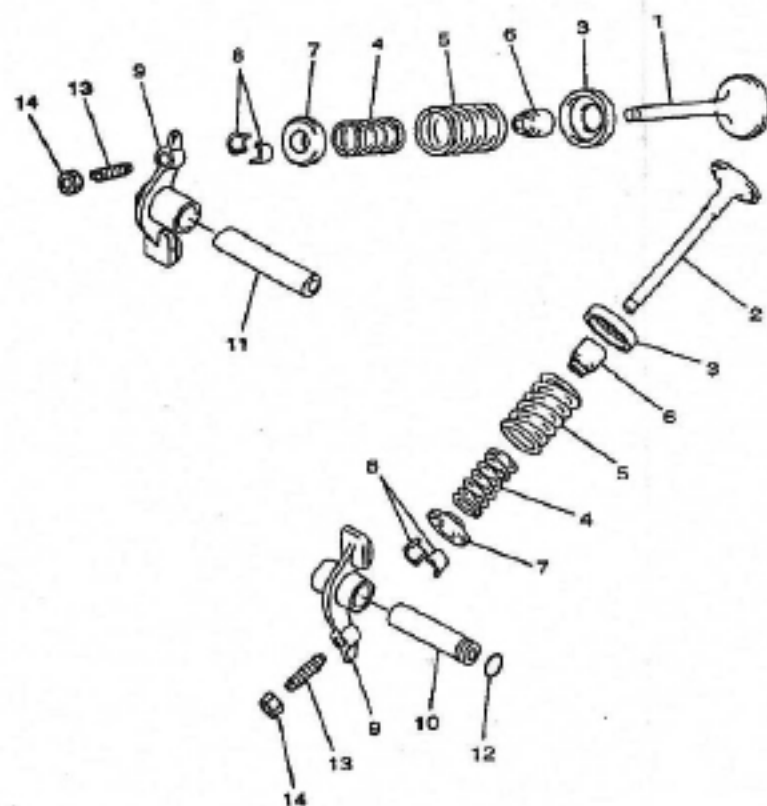


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	2.1.01.0440	INTAKE VALVE	1	进气门
2	2.1.01.0450	EXHAUST VALVE	1	排气门
3	2.1.01.0460	SEAT SPRING VALVE	2	气门弹簧下座
4	2.1.01.0470	SPRING VALVE INNER	2	气门内弹簧
5	2.1.01.0480	SPRING VALVE OUTER	2	气门外弹簧
6	2.1.01.0490	SEAL VALVE STEM	2	气门杆油封组件
7	2.1.01.0500	RETAINER SPRING VALVE	2	气门弹簧上座
8	2.1.01.0510	COTTER VALVE	4	气门锁夹
9	2.1.01.0520	ROCKER ARM VALVE	2	气门摇臂组件
10	2.1.01.0530	EXHAUST ROCKER SHAFT	1	排气门摇臂轴
11	2.1.01.0540	INTAKE ROCKER SHAFT	1	进气门摇臂轴
12	8.3.01.0140	O-RING 8.8x1.8	1	O 型圈 8.8x1.8
13	2.1.01.0550	ADJUSTING SCREW VALVE	2	气门调节螺钉
14	2.1.01.0560	NUT M6X0.75	2	气门调节螺母 M6X0.75

23 WATER PUMP

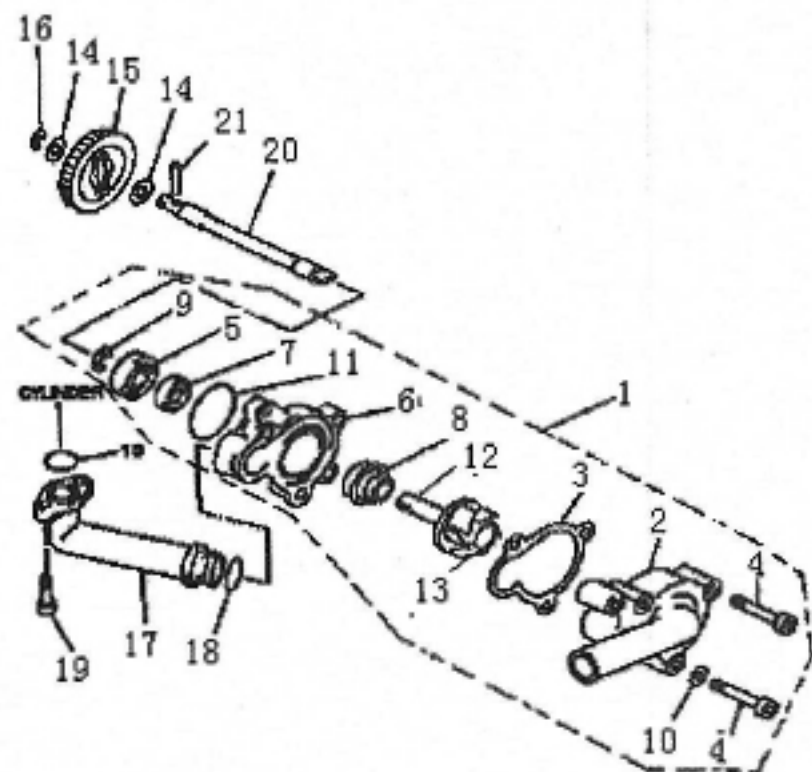


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	2.1.01.8000	WATER PUMP ASSY	1	水泵组件
2	2.1.01.8020	HOUSING COVER	1	泵盖
3	2.1.01.8030	GASKET HOUSING COVER2	1	泵壳密封垫
4	2.1.01.8040	SOCKET HEAD BOLT M6X35	3	内六角螺栓 M6X35
5	2.1.01.8050	BEARING	1	单列向心球轴承
6	2.1.01.8060	WATER PUMP HOUSING	1	泵壳
7	2.1.01.8070	OIL SEAL 10X21X5	1	油封 10X21X5
8	2.1.01.8080	MECHANICAL SEAL	1	机械密封
9	2.1.01.8090	CIRCLIP 10	1	挡圈 10
10	2.1.01.8100	GASKET 6	1	垫圈 6
11	2.1.01.8110	O-RING 33.5X2.65	1	O 型圈 33.5X2.65
12	2.1.01.8120	IMPELLER SHAFT GEAR	2	叶轮轴
13	2.1.01.8010	IMPELLER SHAFT	1	叶轮
14	0.04.02010	WASHER PLATE 8	2	垫圈 8.2x16x1.3
15	2.1.01.0080	IMPELLER SHAFT GEAR	1	驱动齿轮
16	0.04.02110	CIRCLIP 8	1	轴用挡圈 8
17	2.1.01.0220	JOINT	1	连接弯管组件 (水道)
18	0.06.00800	O-RING 15.5X2.5	2	O 型圈 15.5X2.5
19	0.02.01340	SOCKET HEAD BOLT M6X15	2	内六角螺钉 M6X15
20	2.1.01.0070	SHAFT	1	轴 (水泵)
21	0.06.00800	DOWEL PIN C3X22	1	销 C3X22

26 OIL PUMP

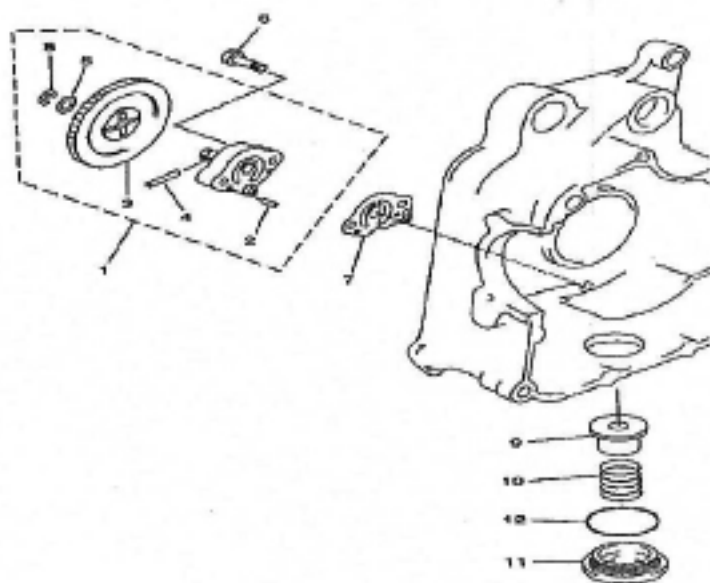


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	2.1.01.7000	OIL PUMP ASSY	1	机油泵部件
2	2.1.01.7010	DOWEL PIN 3X12	2	滚针 3X12
3	2.1.01.7020	GEAR PUMP DRIVEN	1	传动齿轮
4	2.1.01.7060	DOWEL PIN C3X22	1	滚针 3X22
5	2.1.01.7040	WASHER PLATE	1	垫片 8
6	2.1.01.7050	CIRCLIP	1	开口挡圈 6
7	2.1.01.7030	GASKET	1	纸垫
8	0.02.00530	SCREW M6X22	2	十字槽盘头螺钉 M6x22
9	2.1.01.0190	OIL STRAINER	1	滤网组件
10	2.1.01.0200	COMPRESSION SPRING	1	弹簧
11	2.1.01.0210	DRAIN PLUG	1	放油盖
12	8.3.01.0080	O-RING 36X3.5	1	O 型圈 36X3.5

27 AIR CLEANER

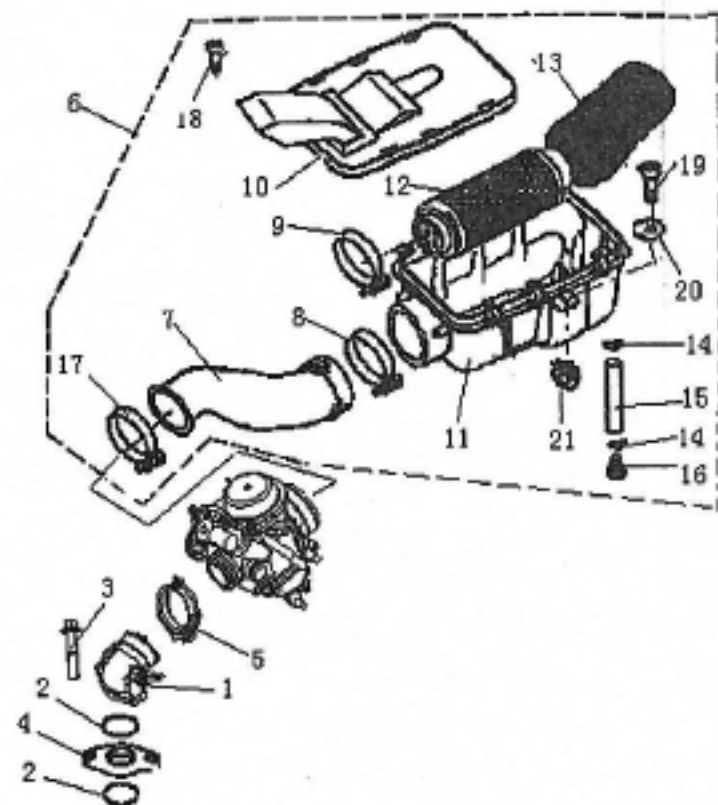


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	2.1.01.0090	JOINT CARBURETOR 1	1	进气连接弯管组件
2	8.3.01.0090	O-RING 35X2	2	O 型圈 35X2
3	0.32.01540	BOLT M6X25	2	内六角圆柱头螺钉 M6x25
4	2.1.01.0240	JOINT	1	法兰
5	2.1.01.0250	HOSE CLAMP D	1	环箍组件 B
6	2.5.01.0000	AIR CLEANER ASSY	1	空滤器
7	2.5.01.0020	AIR CLEANER JOINT	1	连接弯管
8	2.5.01.0120	HOSE CLAMP B	1	空滤器卡箍 B
9	2.5.01.0090	HOSE CLAMP A	1	空滤器卡箍 A
10	2.5.01.0050	COVER AIR CLEANER	1	空滤器盖组件
11	2.5.01.0060	AIR CLEANER CASE1	1	空滤器箱体
12	2.5.01.0070	ELEMENT COMP AIR CLEANER	1	滤芯组件
13	2.5.01.0080	FILTER COVER	1	滤芯盖
14	6.4.01.0030	CLIP	2	卡箍 Φ13
15	2.5.01.0100	HOSE	1	空滤器放油管
16	2.5.01.0110	PLUG	1	放油管堵头
17	2.5.01.0040	HOSE CLAMP C	1	空滤器卡箍 C
18	0.02.00630	BOLT 5X12	10	十字槽盘头螺钉 M5X12
19	0.01.00530	BOLT M6X30	2	螺栓 M6X30
20	0.04.00110	WASHER6	2	垫片 6
21	2.5.01.0010	AIR CLEANER AMORTIZE	2	空滤器缓冲垫

28 CARBURETOR

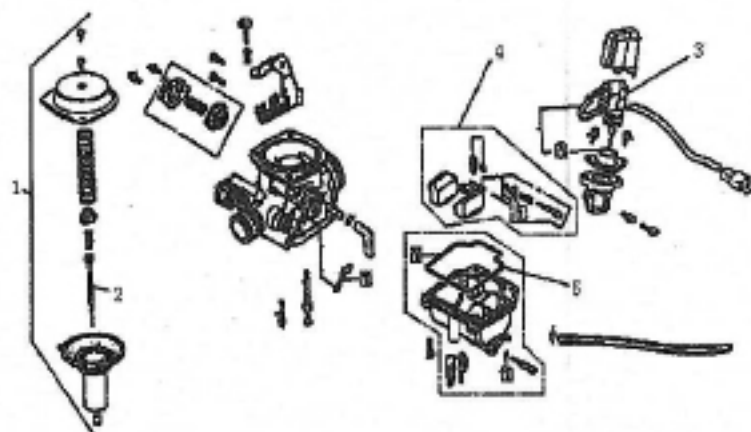


REF. No.	PART NO.	DESCRIPTION	Q'TY	名称
1	2.8.01.0000	CARBURETOR ASSY	1	化油器
2	2.8.01.0050	JET NEEDLE SET	1	油针
3	2.8.01.0020	AUTO CHOKE ASSEM	1	加浓阀
4	2.8.01.0030	FLOAT ASSY	1	浮子
5	2.8.01.0040	BOWL GASKET	1	橡胶垫

29 EXHAUST

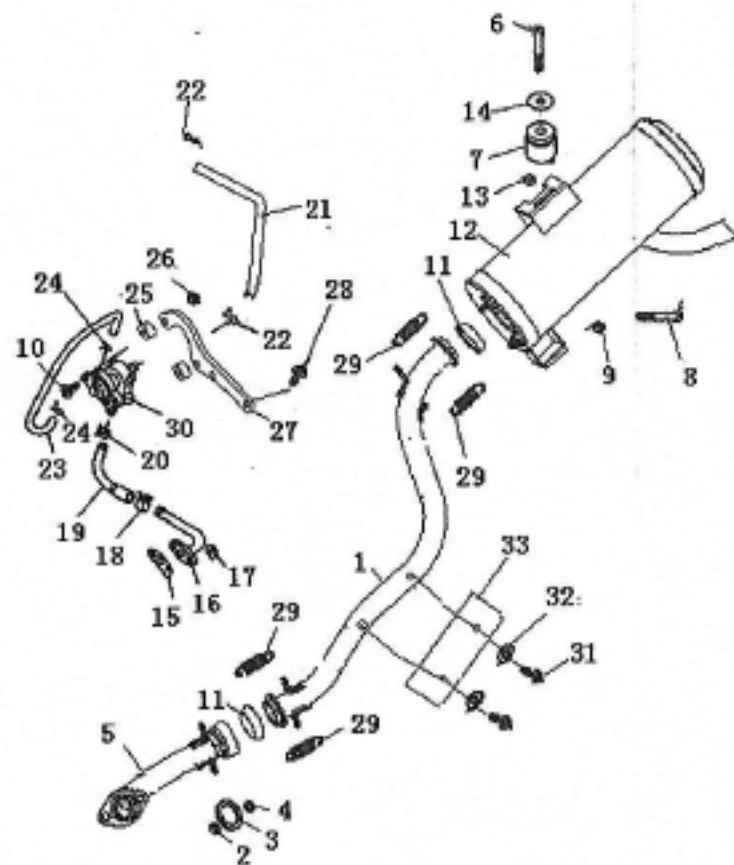


REF. No.	CODE	DESCRIPTION	QTY	名 称
1	2.4.09.1010	EXHAUST PIPE 1	1	消音器后部弯管
2	0.03.00130	SELF-LOCKING NUT M8	2	螺母 M8
3	2.4.01.0270	EXHAUST PIPE GASKET	1	消音器垫圈
4	0.04.00710	WASHER 8	2	弹垫 8
5	2.4.09.1020	EXHAUST PIPE 2	1	消音器前部弯管
6	0.01.02730	BOLT M10X1.25X55	1	螺栓 M10X1.25X55
7	2.4.01.0290	MUFFLER SUPPORT	1	消音器上缓冲块组件
8	0.01.11830	BOLT M10X1.25X65	1	螺栓 M10X1.25X65
9	0.03.00530	NUT M10X1.25	1	螺母 M10X1.25
10	0.01.00530	BOLT M6X30	4	螺栓 M6X30
11	2.4.01.0330	MUFFLER JOINT	2	锥形密封垫
12	2.4.09.1031	MUFFLER	1	消音器筒体 (欧标)
13	0.03.00530	NUT M10X1.25	1	螺母 M10X1.25
14	8.8.01.0270	WASHER PLATE 10	1	垫圈 12.2X36X2
15	2.4.01.0360	WASHER	1	补气垫片
16	2.4.01.0370	HOSE	1	连接管组件(二次补气)
17	0.03.00330	BOLT M6	2	螺栓 M6
18	6.4.01.0030	CLIP 13	1	卡箍 13
19	2.4.01.0381	HOSE I	1	连接管 I (新状态)
20	6.4.01.0030	CLIP 13	1	卡箍 13
21	2.4.01.0391	HOSE II	1	连接管 II (新状态)
22	6.4.01.0100	CLIP 16	2	卡箍 16
23	2.9.01.0270	PIPE	1	负压管

30 CRANKCASE

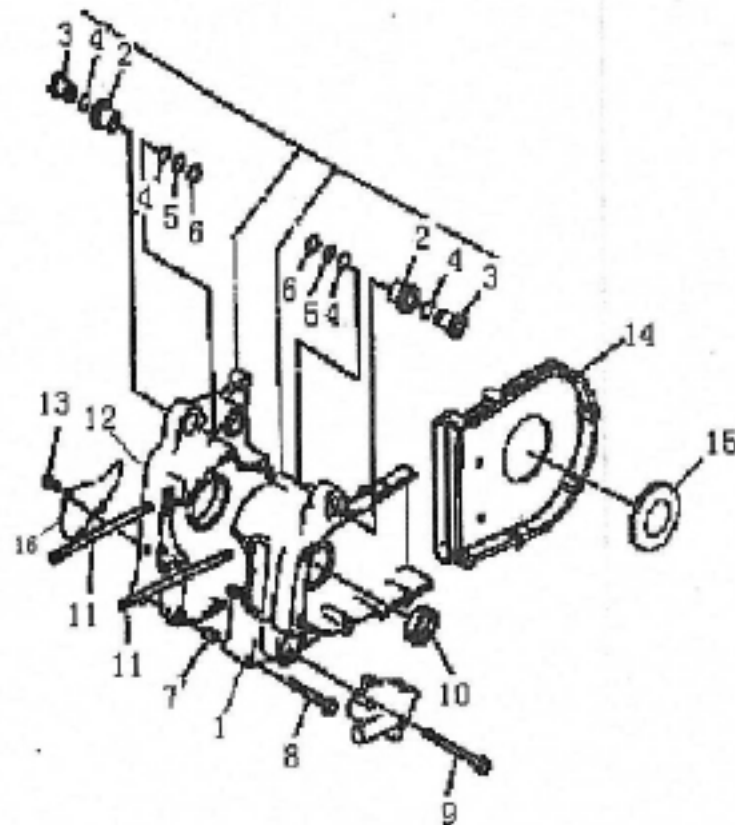


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	2.2.01.0210	COVER CRANKCASE LEFT	1	左箱体组件
2	2.2.01.0010	HOLDER	2	弹性衬套组件
3	2.2.01.0020	COLLAR	2	衬套
4	8.3.01.0120	O-RING	4	O 型圈 16x2.25
5	8.8.01.0210	WASHER PLATE 16	2	垫圈 16
6	0.04.02310	CIRCLIP 16	2	挡圈 16
7	2.1.01.0420	DOWEL PIN 10X14	2	定位销 10X14
8	8.1.01.0090	FLANGE BOLT M6X70	4	螺栓 M6X70
9	8.1.01.0100	FLANGE BOLT M6X100	5	螺栓 M6X100
10	8.9.01.0080	OIL SEAL 30X45X5	1	油封 30X45X5
11	8.1.01.0110	STUD BOLT M8X245	4	双头螺栓 M8X245
12	2.2.01.0090	COVER CRANKCASE RIGHT	1	右箱体组件
13	0.02.01340	SOCKET HEAD BOLT M6X12	2	内六角圆柱头螺钉 M6X12
14	2.2.01.0100	REAR INSIDE COVER	1	后盖
15	2.2.01.0110	SEALING COVER	1	密封盖
16	2.2.01.0030	OPPRESS FLAKE	1	压板

31 LEFT&RIGHT COVER

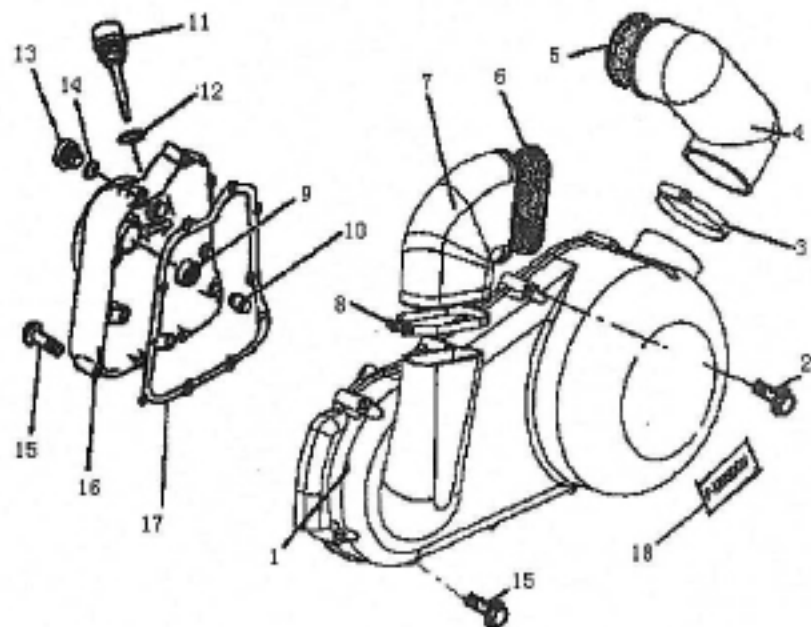


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	2.2.01.0120	COVER LEFT	1	左盖
2	8.1.01.0120	FLANGE BOLT M6X52	5	螺栓 M6X52
3	2.2.01.4030	HOSE CLAMP B	1	卡箍 A
4	2.2.01.4010	JOINT A	1	出气弯管
5	2.2.01.3020	AIR STRAINER B	1	滤网 B
6	2.2.01.4020	AIR STRAINER A	1	滤网 A
7	2.2.01.3010	JOINT B	1	进气弯管
8	2.2.01.3030	HOSE CLAMP A	1	卡箍 B
9	8.9.01.0090	OIL SEAL	1	油封组件 14x27x6/8
10	2.1.01.0420	DOWEL PIN 10X14	4	定位销 10X14
11	2.2.01.0180	OIL PLUG	1	机油尺
12	0.06.00600	O-RING 18X2.65	1	O 型圈 18X2.65
13	2.2.01.0180	OIL PLUG	1	窥视盖
14	0.06.00400	O-RING 14X2.65	1	O 型圈 14X2.65
15	8.1.01.0130	FLANGE BOLT M6X40	15	螺栓 M6X40
16	2.2.01.0200	CAP COVER	1	右盖
17	2.2.01.0220	COVER GASKET RIGHT	1	右盖垫
18	7.5.01.0020	APPLIQUE	1	左盖贴花

32 STARTER

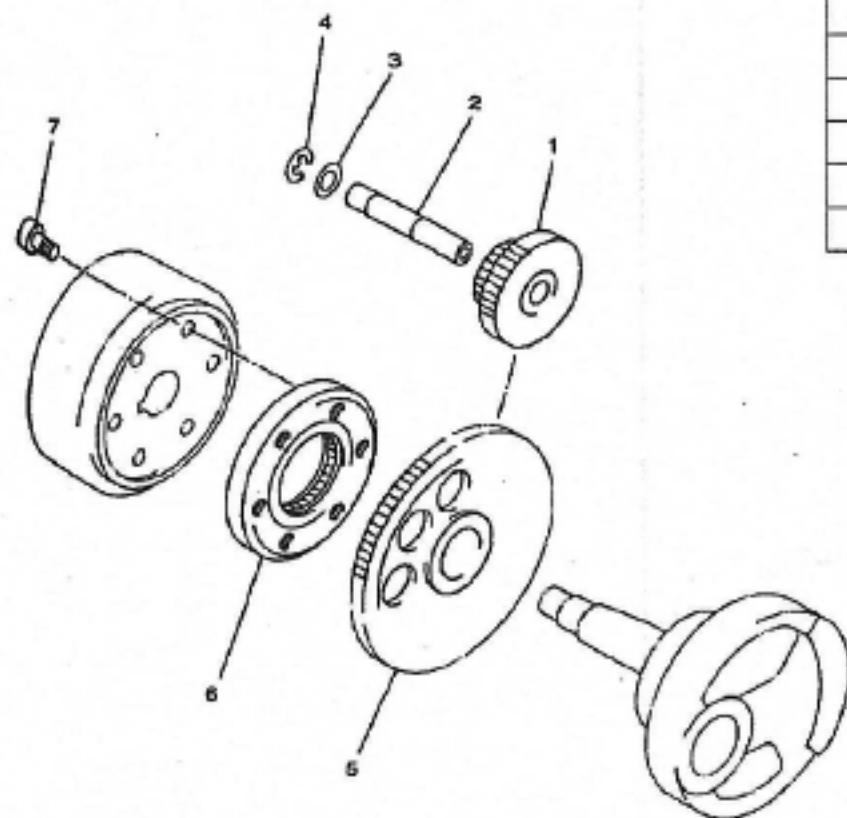


REF. No.	PART NO.	DESCRIPTION	Q'TY	名称
1	2.1.01.0260	GEAR IDLER	1	双联齿轮
2	2.1.01.0270	SHAFT	1	中间轴
3	8.8.01.0220	WASHER 12	1	垫圈 12
4	0.04.02410	CIRCLIP 12	1	弹性挡圈 12 发黑
5	2.1.01.0280	GEAR REDUCTION	1	输出齿轮组件
6	2.1.01.0290	STARTER CLUTCH	1	超越离合器组件
7	0.02.02340	SOCKET HEAD BOLT M8X16	3	内六角平圆头螺钉 M8X16

33 CLUTCH

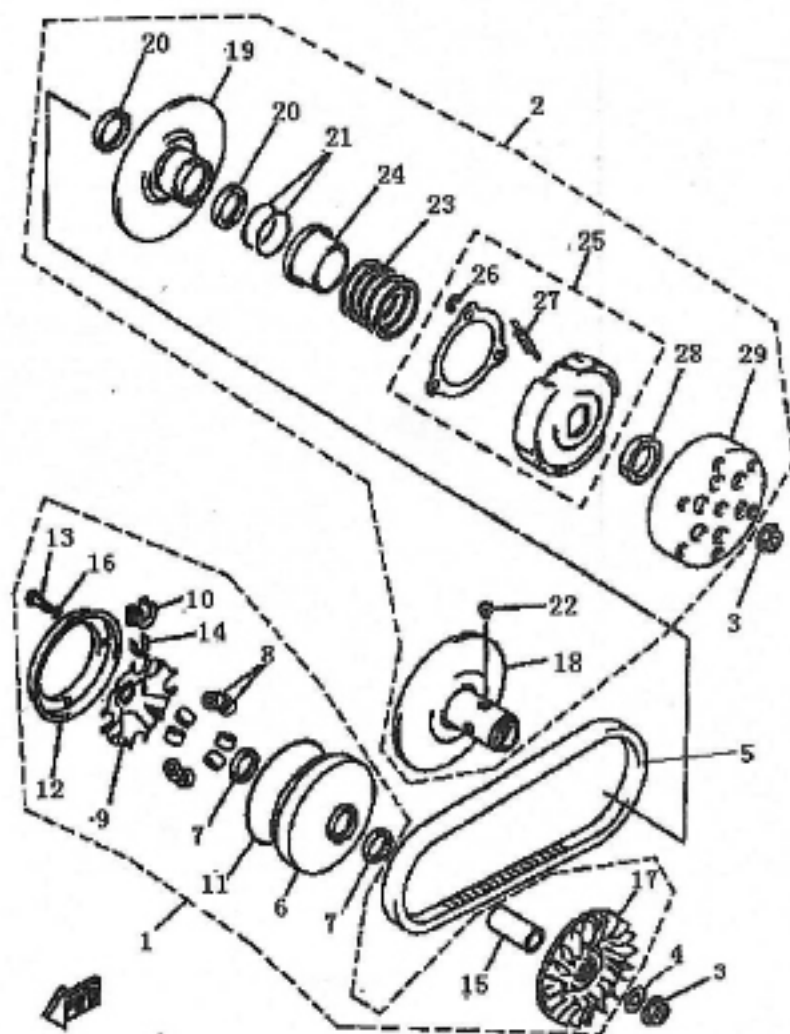


REF.No.	PART NO.	DESCRIPTION	Q'TY	名称
1	2.3.01.2000	DRIVE ASSY COMPLETE	1	主动皮带轮组件
2	2.3.01.1000	DRIVEN ASSY COMPLETE	1	从动轮及离合器组件
3	8.2.01.0120	NUT M14X1	2	螺母 M14X1
4	8.8.01.0240	WASHER PLATE 14	1	平垫圈
5	2.3.01.0040	V-BELT	1	驱动皮带
6	2.3.01.2010	PRIMARY SLIDING SHEAVE COMP	1	主动皮带轮右半组件
7	2.3.01.2130	OIL SEAL	2	油封
8	2.3.01.2030	WEIGHT	8	滚动组件
9	2.3.01.2040	CAM	1	滚动滑盘
10	2.3.01.2060	SLIDER	4	缓冲块
11	2.3.01.2020	O-RING 118X2.5	1	O 型圈 118X2.5
12	2.3.01.2070	STOPPER	1	挡块
13	2.3.01.2110	PAN HEAD SCREW M4X12	4	螺钉 M4X12
14	2.3.01.2080	SPACER 1	4	定位夹
15	2.3.01.2100	COLLAR	1	滑套
16	2.3.01.2120	WASHER PLATE 4	4	小垫片 4
17	2.3.01.2090	SHEAVE PRIMARY FIXED	1	主动皮带轮左半
18	2.3.01.1030	SECONDARY FIXED SHEAVE COMP.	1	皮带轮右半组件
19	2.3.01.1040	SECONDARY SLIDING SHEAVE	1	皮带轮左半组件
20	2.3.01.1050	OIL SEAL	2	外露骨架油封
21	2.3.01.1020	O-RING 45X1.8	2	O 型圈 45X1.8
22	2.3.01.1070	PIN GUIDE	4	导向销钉

34 GENERATOR

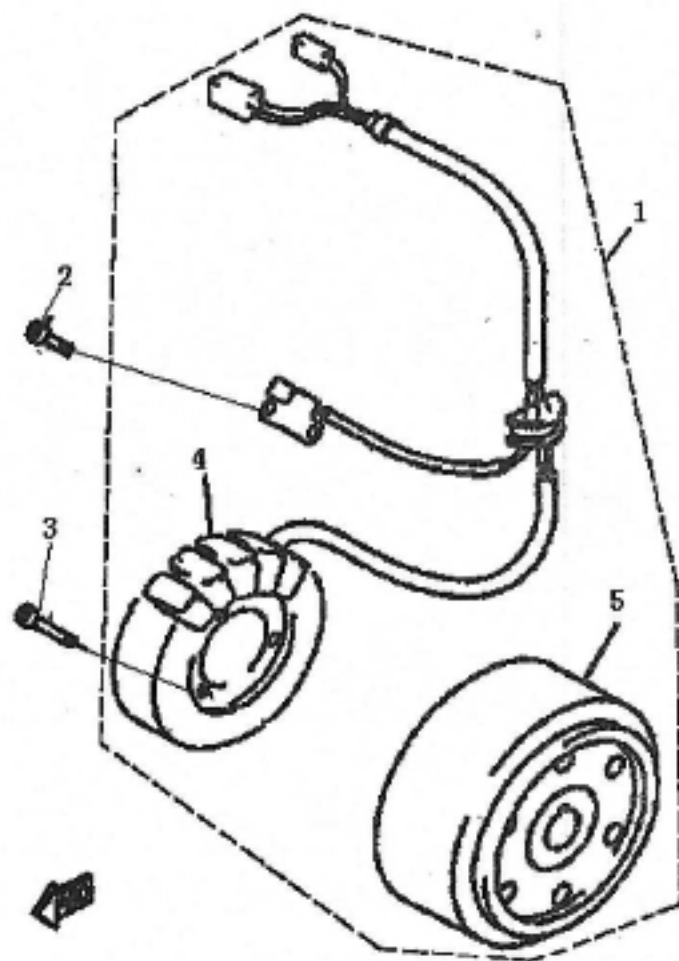


REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	2.1.01.2000.	GENERATOR ASSY	1	发电机组件
2	2.1.01.2030	SOCKET HEAD BOLT M5X10	2	内六角圆柱头螺钉 M5X10
3	2.1.01.2040	SOCKET HEAD BOLT M6X28	3	内六角圆柱头螺栓 M6X28
4	2.1.01.2010	STATOR ASSY	1	定子组合
5	2.1.01.2020	ROTOR ASSY	1	转子组合

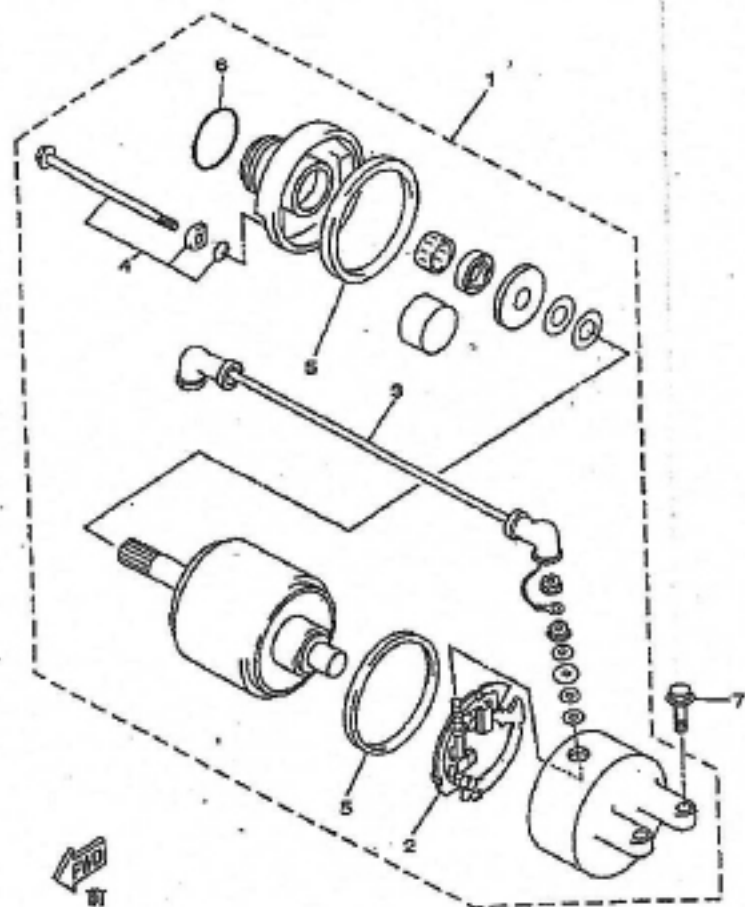


REF. No	PART NO.	DESCRIPTION	QTY	名称
1	2.1.01.6000	STARTING MOTOR ASSY	1	起动电机部件
2	2.1.01.6010	BRUSH HOLD ASSY	1	碳刷架
3	2.1.01.6020	CORD, STARTER MOTOR	1	正接线
4	2.1.01.6030	BOLT	2	螺栓
5	2.1.01.6040	GASKET	2	衬垫
6	2.1.01.6050	O-RING 24.5X3	1	O 型圈 24.5X3
7	2.1.01.6060	FLANGE BOLT M6X25	2	螺栓 M6X25

36 ENGINE

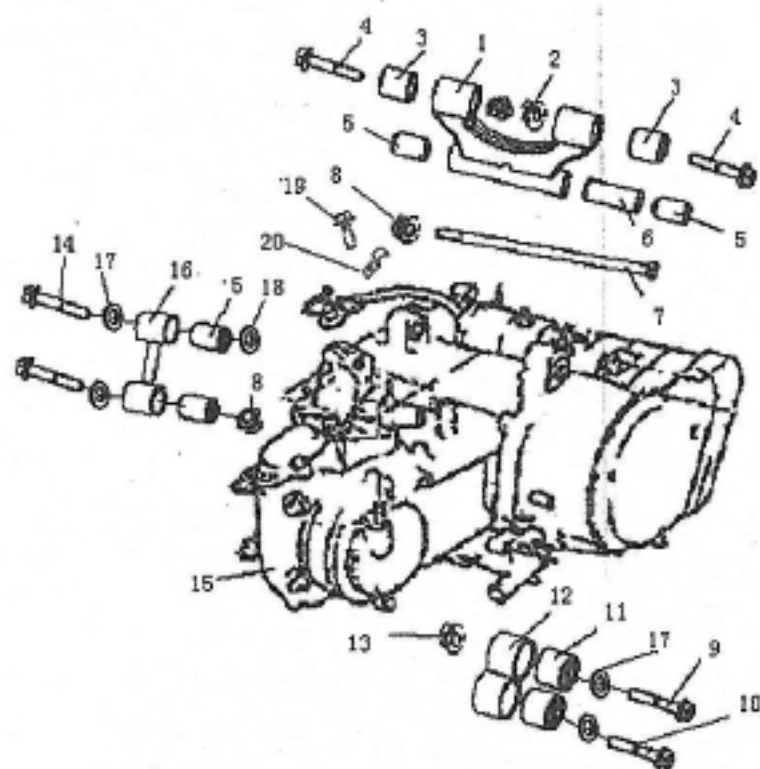

REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	2.7.01.0050	FRONT ENGINE MOUNT BRACKET	1	吊架焊接组件
2	0.03.00630	NUT M12X1.25	2	螺母 M12X1.25
3	2.7.01.0060	BUSHING ENGING BRACKET1	2	吊架缓冲套 I
4	8.1.01.0150	ENGINE BRACKET BOLT	2	吊架安装轴
5	2.7.01.0070	BUSHING ENGING BRACKET2	4	吊架缓冲套 II
6	2.7.01.0080	SPACER ENGINE BRACKET	1	吊架隔套
7	8.1.01.0160	ENGINE MOUNTING BOLT	1	发动机轴 M10x226
8	0.03.00530	NUT M10X1.25	2	螺母 M10X1.25
9	0.01.02730	BOLT M10X1.25X55	1	螺栓 M10x1.25x55
10	0.01.02730	BOLT M10X1.25X55	1	螺栓 M10x1.25x55
11	2.7.01.0090	BUSHING	2	左摇臂缓冲套
12	2.7.01.0100	STAY ENGINE LEFT	1	左摇臂
13	0.03.00530	NUT M10X1.25	1	螺母 M10X1.25
14	0.01.02830	BOLT M10X1.25X65	2	螺栓 M10x1.25x65
15	2.1.01.0001	ENGINE ASSY	1	发动机总成 (散样)
16	2.7.01.0110	STAY ENGINE RIGHT	1	右摇臂
17	0.04.00410	WASHER 10	4	垫片 10
18	0.04.00410	ADJUST WASHER 10	1	垫片 10(调整用)
19	0.01.00630	BOLT M6X20	1	螺栓 M6X20
20	2.7.01.0120	CLIP	1	线卡

38 WARNING LABEL

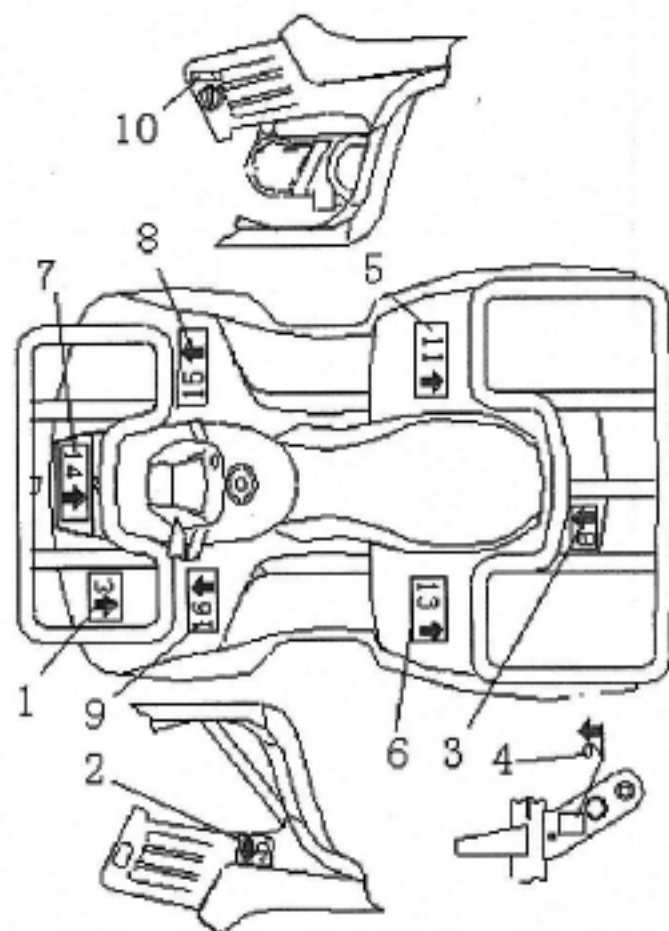

REF. No.	PART NO.	DESCRIPTION	QTY	名称
1	7.5.01.0080	WARNING LABEL 3	1	警告贴花 3
2	7.5.01.0110	WARNING LABEL 6	1	警告贴花 6
3	7.5.01.0130	WARNING LABEL 8	1	警告贴花 8
4	7.5.01.0140	WARNING LABEL 9	1	警告贴花 9
5	7.5.01.0160	WARNING LABEL 11	1	警告贴花 11
6	7.5.01.0180	WARNING LABEL 13	1	警告贴花 13
7	7.5.01.0190	WARNING LABEL 14	1	警告贴花 14
8	7.5.01.0200	WARNING LABEL 15	1	警告贴花 15
9	7.5.01.0210	WARNING LABEL 16	1	警告贴花 16
10	7.5.01.0430	TANK SWITCH LABEL	1	油箱开关标贴